


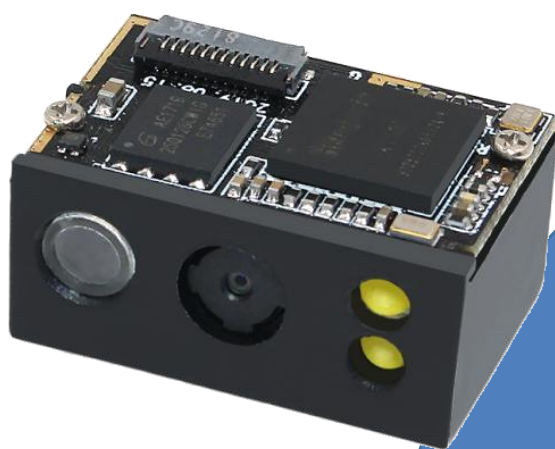

ES20

2D OEM SCAN MODULE

USER GUIDE

Disclaimer

Please read through the manual carefully before using the product and operate it according to the manual. It is advised that you should keep this manual for future reference.

Do not disassemble the device or remove the seal label from the device, doing so will void the product warranty.

All pictures in this manual are for reference only and actual product may differ. The information contained herein is subject to change without prior notice.

The products depicted in this manual may include software copyrighted by Shenzhen YIDA Auto-ID Technology Co., Ltd. or third party. The user, corporation or individual, shall not duplicate, in whole or in part, distribute, modify, decompile, disassemble, decode, reverse engineer, rent, transfer or sublicense such software without prior written consent from the copyright holders.

This manual is copyrighted. No part of this publication may be reproduced, distributed or used in any form without written permission from YidaScan.

Service

If you need more technical support, please call or email us. Visit our website to learn more:

www.yidascan.com

Revision

Version	Description	Date
V1.0.1	Initial Release	2021.08.12

Table of Content

Preview	1
Brief Introduction	1
Chapter Description	1
Explanation of Icons	1
Chapter 1 About ES20	2
Introduction	2
Scanning Skill	7
Chapter2 System Setting	8
Introduction	8
Programming Barcode	8
Use of Programming Code	9
Restore Factory Default	10
Inquiry Firmware Version	10
User Preference	10
Reread Timeout	11
Beeper	12
Beeper Volume	12
Startup Beep	12
Beeper On/Off	13
Beeper Tone-Good Read	13
Beeper Duration - Good Read and Error	13

Beeper Tone-Error	14
LED Illumination	14
Aimer	16
Good Read LED	16
Vibration (Not Enabled)	17
Firmware Upgrade	17
Image Capture (Not Enabled)	17
Auto Sleep Mode	18
Enable/Disable Auto Sleep Mode	18
Enter Sleep Mode	18
Chapter 3 Scan Mode	20
Sense Mode (default)	20
Sense Mode	20
Decode Session Timeout	20
Set custom decode session timeout	22
Good Read Illumination LED Duration	22
Set Custom Good Read Illumination LED Duration	23
Continuous Mode	24
Chapter Communication Interface	25
USB Interface	25
USB HID (default)	25
USB HID Data Upload Method	25

Function Key Mapping	26
Function Key GS Replace	26
Virtual Keyboard	27
USB-Keyboard Transmit Speed	28
Countries Keyboards	29
USB CDC	30
TTL- 232 Interface	30
RS485 (Not Enabled)	31
RS485 Device ID (Not Enabled)	31
Baud Rate	31
Wiegand Interface (Not Enabled)	33
Chapter 5 Data Format	34
Custom Prefix	34
Enable/Disable Custom Prefix	34
Set Custom Prefix	35
Custom Suffix	35
Enable/Disable Custom Suffix	35
Set Custom Suffix	36
CODE ID	36
CODE ID Selection	37
Restore All CODE ID	37
Set Custom CODE ID	37

AIM ID	38
Start Character	39
Terminating Character Suffix	39
Prefix/Suffix Sequence	40
Prefix Sequence	40
Suffix Sequence	40
Convert Case	40
Data Formatter	41
Set Length Range for Start/End Filed	42
Clean Cache Data (Not Enabled)	43
Inquiry Decoded Data (Not Enabled)	43
Chapter 6 Symbologies	44
Introduction	44
Enable/Disable All Symbologies	44
Enable/Disable All 1D Symbologies	44
Enable/Disable All 2D Symbologies	45
Inverse BarCode	45
Codabar	45
Enable/Disable Codabar	45
Codabar Start/Ending Character	46
Set Length Range for Codabar	46
Code 39	48

Enable/Disable Code 39	48
Code 39 Check Digit	48
Code 39 Full ASCII	48
Set Length Range for Code 39	49
Code 32	50
Interleaved 2 of 5 (ITF5)	50
Enable/Disable Interleaved 2 of 5 (ITF5)	50
Interleaved 2 of 5 (ITF5) Check Digit	50
Set Fixed Length for Interleaved 2 of 5 (ITF5)	51
Set Length Range for Interleaved 2 of 5	52
Industrial 2 of 5	53
Enable/Disable Industrial 2 of 5	53
Set Length Range for Industrial 2 of 5	53
Matrix 2 of 5	54
Enable/Disable Matrix 2 of 5	54
Set Length Range for Matrix 2 of 5	54
Code 93	55
Enable/Disable Code 93	55
Set Length for Code 93	55
Code 11	56
Enable/Disable Code 11	56
Code 11 Check Digit Transmission	56

Code 11 Check Digit	57
Code 128	58
Enable/Disable Code 128	58
Set Length Range for Code 128	58
GS1-128	59
ISBT 128 (Not Enabled)	59
UPC-A	59
Enable/Disable UPC-A	59
UPC-A Check Digit	59
Convert UPC-A to EAN-13 (Not Enabled)	60
UPC-E	60
Enable/Disable UPC-E	60
UPC-E Check Digit	60
Convert UPC-E to UPC-A	61
EAN/JAN-8	61
EAN/JAN-13	61
Enable/Disable EAN/JAN-13	61
Convert EAN13 to ISBN	61
Convert EAN13 to ISSN	62
UPC/EAN/JAN Supplemental	62
GS1 DataBar (RSS14) (Stacked)	62
Enable/Disable GS1 DataBar	62

Enable/Disable GS1 DataBar Limited	63
Enable/Disable GS1 DataBar Expanded	63
GS1 DATABAR(RSS14) Preamble (Not Enabled)	63
GS1 DATABAR LIMITED Preamble (Not Enabled)	63
PDF417	64
Micro PDF417	64
QR	64
QR Enable/Disable	64
QR with URL	64
Micro QR	65
Data Matrix	65
Aztec	65
Standard 2 of 5 (Not Enabled)	65
Plessey (Not Enabled)	65
Msiplessey	66
Msiplessey Check Digit	66
Set Length Range for Msiplessey	67
Hanxi code	67
Appendix	68
Appendix1 Data and Digital Barcodes	68
Appendix2 Symbology Table	71
Appendix3 Command Format Description	73

Appendix4 ASCII Character and Keystroke Table	75
Appendix5 ASCII Table	77

Preview

Brief Introduction

This manual provides detailed instructions for setting up and using the ES20 scan engine.

Chapter Description

《Chapter 1 About ES20》	
《Chapter2 System Setting》	Introduces three configuration methods and describes how to configure general parameters
《Chapter3 Scan Mode》	Introduces different scan modes
《Chapter4 Interface》	Introduces different interfaces
《Chapter5 Output Digit》	Explains how to customize scanned data with the advanced data formatter.
《Chapter6 Symbologies》	Lists all compatible symbologies and describes how to configure the relevant parameters.
《Appendix》	Provides factory defaults table and a bunch of frequently used programming barcodes

Explanation of Icons



This icon indicates this information requires extra attention from the reader.



This icon indicates handy tips that can help you use or configure the engine with ease.



This icon indicates practical examples that can help you to acquaint yourself with operations.

Chapter 1 About ES20


Introduction

The ES20 scan engine is capable of scanning any 1D or 2D barcodes, no matter it's presented on a printed paper or a mobile phone screen.

Technical Datasheet*

Image sensor		640*480 CMOS
Illumination		White LED
Focusing		Red LED
Symbologies	2D	(PDF417)、(Micro PDF417)、(QR Code)、(Micro QR)、(Data Matrix)、(Aztec)、(Hanxi code)
	1D	(Codabar)、(Code 39)、(Code 32)、(Interleaved 2 of 5)、(Industrial 2 of 5)、(Matrix 2 of 5)、(Code 93)、(Code 11)、(Code 128)、(GS1-128)、(ISBT 128)、(UPC-A)、(UPC-E)、(EAN/JAN-8)、(EAN/JAN-13)、(Qlessey)、(GS1 DataBar(RSS14))、(Standard 2 of 5)、(Msiplessey)
Typical Decode Range	EAN-13 (13mil)	45mm~200mm (Size: 31mm*7mm)
	PDF417 (6mil)	30mm~135mm (Size: 14mm*7mm)
	Code39 (5mil)	40mm~120mm (Size: 27mm*8mm)
	Data Matrix (10mil)	30mm~140mm (Size: 5mm*5mm)
	QR Code (15mil)	30mm~200mm (Size: 10mm*10mm)
Symbol Contrast*		≥20% Minimum Reflectance Difference
FOV		L 41°, V 31°
Interface		TTL、USB
Dimension(mm)		22(W)×14.5(D)×11.7(H)
Working Voltage		3.3 VDC±5%
Power consumption		810mW(Typical value)
Electric current @3.3 VDC	Working	245mA(RMS Typical value), 320mA(RMS Max)
	Standby	30mA
Operating Temperature		-10°C~+60°C
Storage Temperature		-40°C~+70°C
Operating Humidity		5%~95% (No condensation)
Ambient Light		0~100,000LUX


FOV of ES20

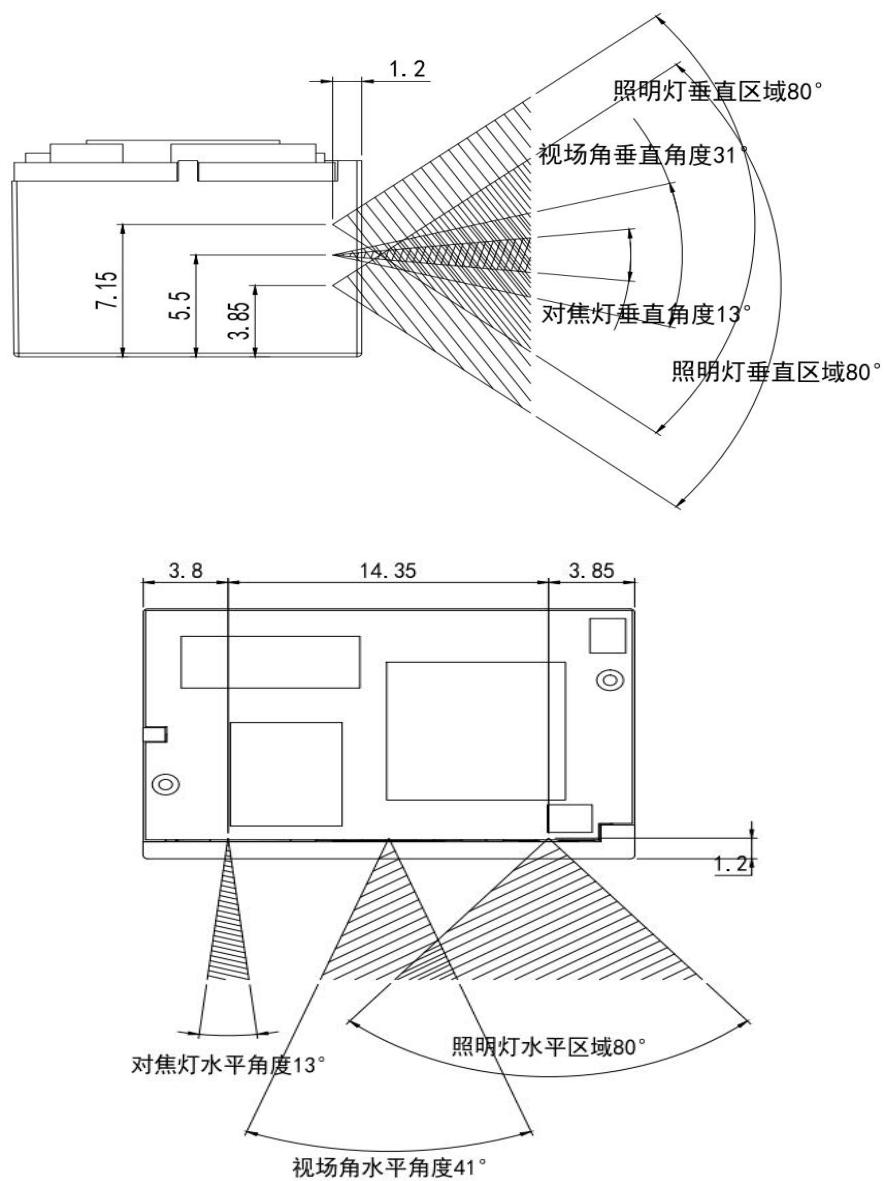

Pin Description

The physical interface of ES20 is 12-PIN FPC interface. 12-PIN FPC can be multiplexed into two communication interface: TTL-232 communication interface and USB communication interface. Figure below shows the position of the 12-PIN FPC interface on the ES20 decoder board. The PIN 1 and PIN12 positions on the 12-PIN FPC are also marked, PIN 1 ~ PIN 12 in order.




12pin FPC Connector

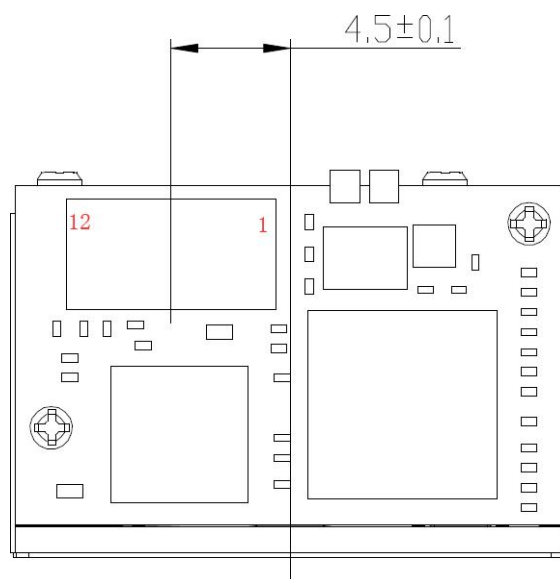

Pin out Description

PIN#	Signal Name	I/O Type	Description
1	NC	-	Null
2	VIN	-	Power Input+3.3V
3	GND	-	Ground
4	RXD	I	TTL receive
5	TXD	O	TTL Transmit
6	USB_DN	I/O	USB D-Signal
7	USB_DP	I/O	USB D+Signal
8	PIN 8	-	-
9	Buz	O	Beeper Output
10	LED	O	Good Read LED Output
11	nRESET	I	Reset Input
12	nTRIG	I	Trigger

Dimension:(mm)

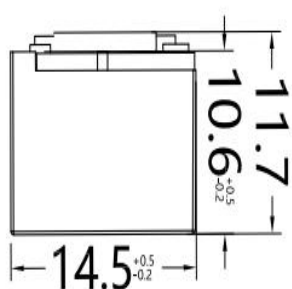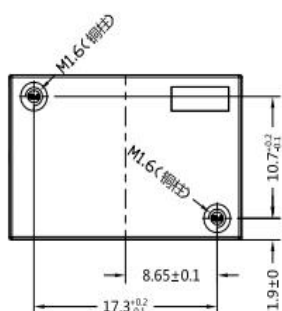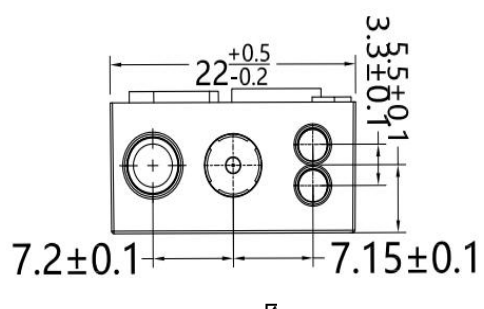

Maintenance

- * The window must be kept clean, the supplier do not bear the guarantee. responsibility due to the improper maintenance.
- * Avoid the window being wear and tear or scratched by hard object.

-
- * Use the hairbrush to remove the stain on the window.
 - * Clean the window with a soft cloth, such as lens cleaning cloth.
 - * Spraying liquid onto the window is prohibited.
 - * Prohibit any cleaning solvents, except for the cleaning water.

Scanning Skill

If the barcode is small, it should be closer to the scanning window; if the barcode is large, it should be far away from the scanning window a little more, thus easier to be read correctly. If the barcode is highly reflective (for example, the coated surface), you may need to tilt the barcode at an angle to successfully scan it.



Chapter2 System Setting

Introduction

The ES20 can be configured by scanning programming barcodes. All user programmable features/options are described along with their programming barcodes/commands in the following sections. This programming method is most straightforward. However, it requires manually scanning barcodes. As a result, errors are more likely to occur.

Programming Barcode



 
The figure above is an example that shows you the programming barcode for the Enter Setup function:

1. The programming barcode.
2. The description of feature/function.


Use of Programming Code

Scanning the **Enter Setup** barcode can enable the engine to enter the setup mode.

Then you can scan a number of programming barcodes to configure your engine. To exit the setup mode, scan the **Exit Setup** barcode or a non-programing barcode, or reboot the engine



Enter Setup (default)

 


Exit Setup

Restore Factory Default



Restore Factory Default

 Inquiry Firmware Version



Inquiry Firmware Version

User Preference

User can set up his/her preference of the scanner.



Save User Preference



Restore to User Preference Default

Reread Timeout

Reread Timeout can avoid undesired rereading of same barcode in a given period of time.

This feature is only applicable to the Sense and Continuous modes.

It's programmable as 500ms, 750ms, 1s and 2s, 500ms is the default value.



500ms (default)



750ms



1s



2s

Beeper

 
The scanner issues different beeps to indicate status: Good-Read Beep, Error Beep, Startup Beep and Programming Beep.

Beeper Volume

For setting up Good Read Beep and Error Beep only.



High Volume (default)



Low Volume

Startup Beep

The engine can be programmed to beep when it is powered on. Scan the **Off** barcode if you do not want a power on beep.



On (default)



Off

Beeper On/Off

Setting for "Good Read-Beep" and Error Beep"

 


On (default)



Off

Beeper Tone-Good Read



Low Tone (default)



Medium Tone



High Tone

Beeper Duration - Good Read and Error



Long Duration (default)



Short Duration

Beeper Tone-Error



Low Tone (default)



Medium Tone



High Tone

LED Illumination

Normal (default) : LED on engine are turned on during image capture;

Always on: Illumination LED on the engine keep on after the engine is powered on.

Always off: Illumination LED on the engine are off all the time



Normal (default)



Always on



Always off

Aimer

Normal (default) : The engine projects an aiming pattern only during barcode scanning/capture.

Always On: Aiming pattern is constantly on after the engine is powered on.

Off: Aiming pattern is off all the time.



Normal (default)



Always on



Always off

Good Read LED

The LED can be programmed to be On or Off to indicate good read.



On (default)



Off

Vibration (Not Enabled)

Firmware Upgrade

Please connect the scanner with a USB cable for firmware upgrade.



Firmware Upgrade

Example

Steps to upgrade firmware:

1. Plug the scanner with a USB cable;
2. Scan **Firmware Upgrade** barcode to enter USB driver mode and wait for USB driver showing up on the computer;
3. Copy the firmware file into the USB driver;
4. Eject the USB driver and replug the usb cable to restart up the scanner and the scanner will start the firmware upgrade procedure.
5. The scanner beeps after firmware upgrading.

If the upgrade is successful, the factory settings will be restored, and

users can reset the scanner according to their needs.

ATT

If the upgrade fails, you need to re-power on and restart the scanner and perform the above upgrade steps again.

Image Capture (Not Enabled)

Auto Sleep Mode

Enable/Disable Auto Sleep Mode

The auto sleep mode can be set up only when the scanner is under Level Mode. Auto Sleep allows the engine to automatically enter the sleep mode if no operation or communication is performed for a time period (user programmable). Sending trigger signal can awake the engine. The default setting is 5s.



When the scanner is under USB-keyboard interface and awake from auto sleep mode, it will not transmit any decoded data until it's re powered on.



Disable (default)



Enable

Enter Sleep Mode



Enter Sleep Mode Now

Set Time Period from Idle to Sleep

The following parameter sets how long the engine remains idle (no operation or communication occurs) before it is put into sleep mode. It is programmable in 1s increments from 1s to 3600s.



Time Period from Idle to Sleep

Example

Set Time Period from Idle to Sleep to '10s'(default: 5s)

1. Scan **Time Period from Idle to Sleep** barcode.
2. Scan numeric barcode "1" "0" from the "Digital barcodes" section in Appendix 1.
3. Scan **Save** barcode in Appendix 1

Chapter 3 Scan Mode

Sense Mode (default)

Sense Mode

The engine activates a decode session every time it detects a barcode presented to it.

The decode session continues until a barcode is decoded or the decode session

 
timeout expires. **Reread Timeout** can avoid undesired rereading of same barcode in a given period of time.



Sense Mode

Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan attempt. It is programmable from 3s to 10s. The default setting is 3s.



Short (default)



Medium



Long



Custom Decode Session Timeout

Set custom decode session timeout

It's programmable in 0.1s increments from 1 to 999. The default setting is 3s.



Set Custom Decode Session Timeout

Example

Set the decode session timeout to 10s:

- 1、 Scan **Set Custom Decode Session Timeout** Barcode
- 2、 Scan the numeric barcodes: "1"0" from the "Digital barcodes" section in Appendix1.
- 3、 Scan the **Save** barocde in Appendix1

Good Read Illumination LED Duration

This parameter sets the amount of time that the Good Read LED to remain on following a good read.

It's programmable as Short, Medium and Long, corresponding to 3s, 7s and 10s. The default setting is 0s.



Short



Medium



Long



Set up Custom Duration

Set Custom Good Read Illumination LED Duration

This parameter sets the amount of custom time that the Good Read LED to remain on following a good read. It is programmable in 0.1s increments from 1 to 999.



Set Custom Good Read Illumination LED Duration

Example

Set the custom duration as 10s:

- 1、 Scan **Set Custom Good Read LED Duration** Barcode.
- 2、 Scan numeric barcode "1" "0" from the "Digital Barcodes" section in Appendix1
- 3、 Scan **Save** barcode in Appendix 1

Manual Trigger Mode

A trigger pull activates a decode session. The decode session continues until a barcode is decoded or you release the trigger.



Manual Trigger Mode

Continuous Mode

The engine automatically starts one decode session after another. To suspend/resume barcode reading, simply press the trigger. **Reread Timeout** can avoid undesired rereading of same barcode in a given period of time.



Continuous Mode

Chapter Communication Interface

USB Interface

USB HID (default)

When the engine is connected to the USB port on a host device, you can enable the USB HID Keyboard feature by scanning the barcode below. Then engine's transmission will be simulated as USB keyboard input. The Host receives keystrokes on the virtual keyboard. It works on a Plug and Play basis and no driver is required.



USB HID

USB HID Data Upload Method



Before turning on this function, make sure that "USB HID Mode" is turned on.



PC Software



USB-Keybaord (default)



Both PC Software and USB-Keybaord

Function Key Mapping

This setting is aimed for USB-Keyboards Mode. Please Refer to Appendix 《ASCII Table》.



Enable



Disable (default)

Function Key GS Replace



Do not replace (default)



Replace as Ç



Replace as |



Replace as ^]



Replace as]



Replace as <GS>

Virtual Keyboard

Virtual keyboard Enable (mode one): The characters between 0x20 ~ 0xFF are output using the virtual keyboard which is not supported under the current keyboard layout, and the characters between 0x00 ~ 0x1F are output according to the definition of control characters.

Virtual keyboard Enable (mode two): All characters between 0x20 and 0xFF are output using virtual keyboard, and characters between 0x00 and 0x1F are output according to the definition of control characters.

Virtual keyboard Enable (mode three): All characters used between 0x00 and 0xFF are output using virtual keyboard.



Disable Virtual Keyboard (default)



Enable Virtual Keyboard (Mode 1)



Enable Virtual Keyboard (Mode 2)



Enable Virtual Keyboard (Mode 3)

 
USB-Keybaord Transmit Speed



Low Speed



Medium Speed



High Speed (default)



Set Custom Speed

Set Custom Transmission Speed

The transmission speed can be set up from 2ms to 50ms.



Set Custom Transmission Speed (default 10ms)

Example

Set custom transmission speed to 10ms:

1. Scan **Set Custom Transmission Speed** barcode.
2. Scan numeric barcode "1" "0" from the "Digital Barcodes" section in appendix 1.
3. Scan **Save** barcode in appendix 1.

When Barcode contains 0A and 0D; Carriage Return and Line Feed



Only 0A outputs Line Feed

 


Only 0D output Line Feed (default)




Both 0A and 0D output Line Feed

Countries Keyboards



USA-English (default)

 

Italian



Spanish



Portuguese-Portugal



Portuguese-Brazil



French(France)



German(Austria)



Turkish Q



Turkish F



English(UK)



Japanese (Japan)



German(Switzerland)

USB CDC



USB CDC

TTL- 232 Interface

Serial communication interface is usually used when connecting the engine to a host device (like PC, POS). However, to ensure smooth communication and accuracy of data, you need to set communication parameters (including baud rate, parity check, data bit and stop bit) to match the host device



TTL

RS485 (Not Enabled)

RS485 Device ID (Not Enabled)

Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the baud rate to match the host requirements. Default is 9600bps.



Baud Rate4800



Baud Rate9600



Baud Rate19200



Baud Rate38400



Baud Rate57600



Baud Rate115200

Parity Check

Set the parity type to match the host requirements.

Odd Parity: If the data contains an odd number of 1 bits, the parity bit value is set to 0.

Even Parity: If the data contains an even number of 1 bits, the parity bit value is set to 0.

None: Select this option when no parity bit is required.

Stop Bit: The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the receiving device for the next character in the serial data stream. Set the number of stop bits to match the host requirements.



Data Bit8, Stop Bit1, No Parity (default)



Data Bit8, Stop Bit1, Odd Parity



Data Bit8, Stop Bit1, Even Parity



Data Bit8, Stop Bit2, No Parity



Data Bit8, Stop Bit2, Odd Parity



Data Bit8, Stop Bit2, Even Parity

 
Wiegand Interface (Not Enabled)

Chapter 5 Data Format

Custom Prefix

Enable/Disable Custom Prefix

If custom prefix is enabled, you are allowed to append to the data a user-defined prefix that cannot exceed 10 characters. For example, if the custom prefix is "AB" and the barcode data is "123", the Host will receive "AB123".



Enable Custom Prefix



Disable Custom Prefix (default)



Restore All Custom Prefix

Set Custom Prefix

To set a custom prefix, scan the **Set Custom Prefix** barcode then the numeric barcodes corresponding to the hexadecimal value of a desired prefix then the **Save** barcode.



Set Custom Prefix

Example

Set custom prefix "a" (Hex value is 0x61) to all symbologies(CODE ID value is 0x99)

- 1.. Scan **Set Custom Prefix** barcode.
- 2.. Scan numeric barcode "9961" from the "Digital Barcodes" section in Appendix 1
3. Scan **Save** barcode in Appendix 1
4. Scan **Enable Custom Prefix** barcode.

Custom Suffix

Enable/Disable Custom Suffix

If custom suffix is enabled, you are allowed to append to the data a user-defined suffix that cannot exceed 10 characters. For example, if the custom suffix is "AB" and the barcode data is "123", the Host will receive "123AB".



Enable Custom Suffix



Disable Custom Suffix (default)



Restore All Custom Suffix

Set Custom Suffix

To set a custom prefix, scan the **Set Custom Suffix** barcode then the numeric barcodes corresponding to the hexadecimal value of a desired prefix then the **Save** barcode.



Set Custom Suffix

Example

Set custom suffix "a" (Hex value is 0x61) to all symbologies(CODE ID value is 0x99)

- 1.. Scan **Set Custom Suffix** barcode.
- 2.. Scan numeric barcode "9"9"6"1" from the "Digital Barcodes" section in Appendix 1
3. Scan **Save** barcode in Appendix 1
4. Scan **Enable Custom Suffix** barcode.

CODE ID

Code ID can also be used to identify barcode type. Unlike AIM ID, Code ID is user programmable. Code ID can only consist of one letters.

CODE ID Selection

CODE ID Prefix: CODE ID before barcode

CODE ID Suffix: CODE ID after barcode



Enable CODE ID (default)



CODE ID Prefix



CODE ID Suffix

Restore All CODE ID



Restore All CODE ID

Set Custom CODE ID



Set Custom CODE ID

Example

Modify Codabar (CODE ID:0x61) CODE ID to be "Y" (Hex: 0x59) :

1.Scan Set Custom CODE ID barcode

2. Scan numeric barcode "6""1""5""9" from the "Digital Barcodes" section in Appendix 1

3. Scan **Save** barcode in Appendix 1

AIM ID

AIM (Automatic Identification Manufacturers) ID defines symbology identifier (For the details, see the "AIM ID Table" section in Appendix). If AIM ID prefix is enabled, the engine will add the symbology identifier before or after the scanned data after decoding

 


AIM ID is not user programmable

Disable AIM ID (default) : Do Not output AIM ID.

AIM ID Prefix: AIM ID before scanned data.

AIM ID Suffix: AIM ID after scanned data.



Disable AIM ID (default)



Enable AIM ID Prefix



Enable AIM ID Suffix

Start Character



No Start Character (default)



Set Start Character as STX

Terminating Character Suffix

A terminating character such as carriage return (CR) or carriage return/line feed pair (CRLF) can only be used to mark the end of data, which means nothing can be added after it.



Set Terminating Character Suffix to CR
(default)



Set Terminating Character Suffix to LF



Set Terminating Character Suffix to CRLF



Set Terminating Character Suffix to LAB



Set Terminating Character Suffix to ETX



Disable Terminating Character Suffix

Prefix/Suffix Sequence

Prefix Sequence



Start Character+CODE ID+AIM ID+Custom Prefix (default)



Start Character+Custom Prefix+CODE ID+AIM ID

Suffix Sequence



Custom Suffix+CODE ID+AIM ID+Terminating Character (default)



CODE ID+AIM ID+Custom Suffix+Terminating Character

Convert Case



 
No Convert Case (default)



Convert Case



Convert All to Lower Case



Convert All to Upper Case

Data Formatter



Prefix or suffix will be outputted regularly.

Data output selection

Transmit Original data (default): The barcode data will not be modified.

Transmit Start-Field : Only transmit the start-Field data and the length will be set up by **Set Length for Start Field** barcode. If the set length is greater than the length of the read character string, the original data will be transmitted. For example: if the string "1234567890" is read and the length is set to 3, the final output data is "123".

Transmit Middle Field: Only transmit the Middle Field and the length will be set up by **Set length for Start Field** barcode and **Set Length for End Field** barcode. If the sum of the two length values is greater than the length of the read character string, the output is empty. For example: if the character string "1234567890" is read, and the start/end field lengths are set to 3 and 4 respectively, the final output data is "456".

Transmit End Filed: Only transmit the End-Field data and the length will be set up by **Set Length for End Field** barcode.. If the set length is greater than the length of the read character string, the original data will be output. For example: if the character string "1234567890" is read and the length is set to 3, the final output data is "890".

Transmit Start Field and end Field: The transmitted data is limited according to the data of "Set Length for Start-Filed" and "Set Length for End-Field". If the sum of the two length values is greater than the length of the read character string, the original data will be transmitted. For example: if the character string "1234567890" is read, and the start/end field lengths are set to 3 and 4 respectively, the final transmitted data is "1237890".。



Original Data(default)



Transmit Start-Field Data



Transmit Middle Field



Transmit End Filed



Transmit Start Field and End Filed

Set Length Range for Start/End Filed

Default value is 1, Range: 1 ~ 7900. When it is set up to be 0, this function will be invalid.

Example: Set Start Field Length as 12

1. Scan **Set Length Range for Start Field** barcode.
2. Scan numeric barcode "1"2" from the Digital Barcodes section in Appendix 1.
3. Scan **Save** barcode in Appendix 1.



Set Length Range for Start Field



Set Length Range for End Field

Clean Cache Data (Not Enabled)

Inquiry Decoded Data (Not Enabled)

Chapter 6 Symbologies

Introduction

Every symbology (barcode type) has its own unique attributes. This chapter provides programming barcodes for configuring the engine so that it can identify various symbologies. It is recommended to disable those that are rarely used to increase the efficiency of the engine.

Enable/Disable All Symbologies

If the **Disable All Symbologies** feature is enabled, the engine will not be able to read any non-programming barcodes except the programming barcodes.



Enable All Symbologies



Disable All Symbologies

Enable/Disable All 1D Symbologies



Enable All 1D Symbologies



Disable All 1D Symbologies

Enable/Disable All 2D Symbologies



Enable All 2D Symbologies



Disable All 2D Symbologies

Inverse BarCode



Only Decode Regular BarCodes (default)



Decode Regular and Inverse BarCodes Both



Tips

Only Decode Inverse Barcode (Not Enabled)

Codabar

Enable/Disable Codabar



Enable (default)



Disable

Codabar Start/Ending Character



Enable



Disable (default)

Set Length Range for Codabar

ATT

Any 1D barcode length can not exceed 127 characters. If minimum length is set to be greater than maximum length, the engine only decodes Codabar barcodes with either the minimum or maximum length. If minimum length is same as maximum length, only Codabar barcodes with that length are to be decoded.



Set the Minimum



Set the Maximum Length

Example

Set the scanner to decode Codabar barcodes containing between 8 and 12 characters:

1. Scan the **Set the Minimum Length** barcode.
2. Scan the numeric barcode "8" from the "Digit Barcodes"

tion in Appendix.

3. Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.

4. Scan the **Set the Maximum Length** barcode.

5. Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.

6. Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.

Code 39

Enable/Disable Code 39



Enable (default)

 


Disable


Code 39 Check Digit



Disable Check Digit (default)



Enable and do not transmit check digit

 

Enable and transmit check digit

Code 39 Full ASCII



Disable (default)



Enable

Set Length Range for Code 39



Set the Minimum



Set the Maximum Length

Example

Set the scanner to decode Code39 barcodes containing between 8 and 12 characters:


7. Scan the **Set the Minimum Length** barcode.
8. Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.
9. Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.
10. Scan the **Set the Maximum Length** barcode.
11. Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.
12. Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.

Code 32

To enable code32, code39 need to be enabled first.



 Enable (default)



Disable

Interleaved 2 of 5 (ITF5)

Enable/Disable Interleaved 2 of 5 (ITF5)



Enable (default)



Disable

Interleaved 2 of 5 (ITF5) Check Digit



Disable Check Digit (default)



Enable and do not transmit check digit



Enable and Transmit Check Digit

Set Fixed Length for Interleaved 2 of 5 (ITF5)



Any Length (4-128 位) (default)



8 Characters



12 Characters



16 Characters



20 Characters



24 Characters



6 Characters



10 Characters



14 Characters



18 Characters



22 Characters



Set Custom Length for ITF5

Set Length Range for Interleaved 2 of 5

Need to scan **Set Custom Length for ITF5** barcode first



Set the Minimum Length (4~128)



Set the Maximum Length (4~128)

Example

Set the scanner to decode ITF25 barcodes containing between 8 and 12 characters:

- 1.Scan the **Set the Minimum Length** barcode.
- 2.Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.
- 3.Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.
- 4.Scan the **Set the Maximum Length** barcode.
- 5.Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.
- 6.Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.

Industrial 2 of 5

Enable/Disable Industrial 2 of 5



Enable (default)



Disable

Set Length Range for Industrial 2 of 5



Set the Minimum Length (4~128)



Set the Maximum Length (4~128)

Example

Set the scanner to decode Industrial 2 of 5 barcodes containing between 8 and 12 characters:

1. Scan the **Set the Minimum Length** barcode.
2. Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.
3. Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.

 
-
4. Scan the **Set the Maximum Length** barcode.
 5. Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.
 6. Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.

Matrix 2 of 5

Enable/Disable Matrix 2 of 5



Enable (default)



Disable

Set Length Range for Matrix 2 of 5



Set the Minimum Length (4~128)



Set the Maximum Length (4~128)

Example

Set the scanner to decode Matrix 2 of 5 barcodes containing between 8 and 12 characters:

1. Scan the **Set the Minimum Length** barcode.
2. Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.

3.Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.

4.Scan the **Set the Maximum Length** barcode.

5.Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.

6.Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.

Code 93

Enable/Disable Code 93



Enable (default)



Disable

Set Length for Code 93



Set the Minimum Length (1~127)



Set the Maximum Length (1~127)

Example

Set the scanner to decode Code93 barcodes containing between 8 and 12 characters:

1.Scan the **Set the Minimum Length** barcode.

2.Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.

3.Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.


4.Scan the **Set the Maximum Length** barcode.

5.Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.

6.Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.

Code 11

 Enable/Disable Code 11



Enable



Disable (default)

Code 11 Check Digit Transmission



Transmit Code 11 Check Digit



Do not Transmit Code 11 Check Digit (default)

Code 11 Check Digit



Disable Check Digit (default)



One Check Digit



Two Check Digit

Set Length Range for Code 11



Set the Minimum Length (1~127)



Set the Maximum Length (1~127)

Example

Set the scanner to decode Code 11 barcodes containing between 8 and 12 characters:

1. Scan the **Set the Minimum Length** barcode.
2. Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.
3. Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.
4. Scan the **Set the Maximum Length** barcode.
5. Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.

6. Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.

Code 128

Enable/Disable Code 128



Enable (default)



Disable

Set Length Range for Code 128



Set the Minimum Length (1~127)



Set the Maximum Length (1~127)

Example

Set the scanner to decode Code 129 barcodes containing between 8 and 12 characters:

1. Scan the **Set the Minimum Length** barcode.
2. Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.
3. Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.
4. Scan the **Set the Maximum Length** barcode.

5. Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.

6. Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.

GS1-128



Enable (default)



Disable

ISBT 128 (Not Enabled)

UPC-A

Enable/Disable UPC-A



Enable (default)



Disable

UPC-A Check Digit



Transmit UPC-A Check Digit (default)



Do not Transmit UPC-A Check Digit

Convert UPC-A to EAN-13



Convert UPC-A to EAN-13



Do not Convert UPC-A to EAN-13 (default)

UPC-E

Enable/Disable UPC-E



Enable (default)



Disable

UPC-E Check Digit



Transmit Check Digit (default)



Do not Transmit Check Digit

Convert UPC-E to UPC-A



Convert UPC-E to UPC-A



Do not Convert UPC-E to UPC-A (default)

EAN/JAN-8



Enable (default)



Disable

EAN/JAN-13

Enable/Disable EAN/JAN-13



Enable (default)



Disable

Convert EAN13 to ISBN



Convert ISBN to ISBN



Do not Convert ISBN to ISBN (default)

Convert EAN13 to ISSN



Convert ISBN to ISSN



Do not Convert ISBN to ISBN (default)

UPC/EAN/JAN Supplemental



Ignore UPC/EAN/JAN Supplemental (default)



Decode UPC/EAN/JAN Supplemental



Autodiscriminate UPC/EAN/JAN with Supplemental

GS1 DataBar (RSS14) (Stacked)

Enable/Disable GS1 DataBar



Enable (default)



Disable

Enable/Disable GS1 DataBar Limited

 


Enable (default)



Disable

Enable/Disable GS1 DataBar Expanded



Enable (default)



Disable

GS1 DATABAR(RSS14) Preamble (Not Enabled)

GS1 DATABAR LIMITED Preamble (Not Enabled)

PDF417

 


Enable (default)



Disable

Micro PDF417



Enable (default)



Disable

QR

QR Enable/Disable



Enable (default)



Disable

QR with URL



Enable



Disable (default)

Micro QR



Enable (default)



Disable

Data Matrix

 


Enable (default)




Disable

Aztec



Enable (default)

 

Disable

Standard 2 of 5 (Not Enabled)

Plessey (Not Enabled)

Msiplessey

Enable/Disable msiplessey



Enable (default)



Disable

Msiplessey Check Digit



Disable Check Digit



One Check Digit MOD10 (default)



Two Check Digit MOD10/MOD10



Two Check Digit MOD10/MOD11

Set Length Range for Msiplessey



Set the Minimum Length (1~127)



 
Set the Maximum Length (1~127)

Example

Set the scanner to decode Msiplessey barcodes containing between 8 and 12 characters:

1. Scan the **Set the Minimum Length** barcode.
2. Scan the numeric barcode "8" from the "Digit Barcodes" section in Appendix.
3. Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.
4. Scan the **Set the Maximum Length** barcode.
5. Scan the numeric barcodes "1" and "2" from the "Digit Barcodes" section in Appendix.
6. Scan the **Save** barcode from the "Save/Cancel Barcodes" section in Appendix.

Hanxi code



Enable (default)



Disable

Appendix

Appendix1 Data and Digital Barcodes

	
	0
	
1	
	
	2
	
3	
	
	4
	
5	
	
	6
	
7	

	
	8
	
9	
	
	A
	
B	
	
	C
	
D	
	
	E
	
F	
	
	Cancel Last String
	
Cancel Current Setting	

	
	Cancel Last Digit
	
Save	

Appendix2 Symbology Table

Symbology	CODE ID		AIM ID
	HEX	Code ID	ID
All Symbology	0x99		
Codabar	0x61	a	]F0
Code 11	0x68	h	]H1
Code 128(Including GS1 128)、GS1-128	0x6A	j	]C0
ISBT 128	0x6A	j	]C0
Code 32	0x3C	<	]X0
Code 39	0x62	b	]A0
Code 93	0x69	i	]G0
EAN			
EAN-13(including ISBN)	0x64	d	]E0
EAN-8	0x44	D	]E4
GS1			
GS1 DataBar	0x79	y	]e0
GS1 DataBar Limited	0x7B	{	]e0
GS1 DataBar Expanded	0x7D	}	]e0
2 of 5			
Interleaved 2 of 5	0x65	e	]I0
Matrix 2 of 5	0x6D	m	]X0
Straight 2 of 5 Industrial	0x66	f	]S0

MSI	0x67	g	]M1
UPC			
UPC-A	0x63	c	]E0
UPC-E	0x45	E	]E0
Aztec Code	0x7A	z	]z0
Han Xin	0x48	H	]X0
Codablock F	0x6A	j	]C0
Data Matrix	0x77	w	]d1
PDF417、 Micro PDF417	0x72	r	]L0
QR、 Micro QR	0x73	s	]Q1

Appendix3 Command Format Description

Head	DEV ID	CMD	Status	Package No.	Data Length	Data	CRC16	End
2byte	1 byte	3 byte	1 byte	2 byte	2 byte	N byte	2 byte	2 byte
0x0057								0x4150
Description	1.For multi-byte data types, the low byte is before the high byte (little endian mode), (for example, the data length of 2 bytes is 0x0001, and the actual sending order is 01 00 instead of 00 01). The maximum length of the command is 64byte. If a command with a length greater than 64byte is sent, it will be sent in packets.							
	2.head: The Master is 0x57 0x00, and the Slave is 0x31 0x00.							
	3.DEV ID: The default value is 0x00, which is used to distinguish different devices in the 485 serial port multi-machine communication							
	CMD	[23:16]	《二、菜单设置条码》“一级菜单”栏的最后一位数字，内容空则为 0。					
		[15:8]	《二、菜单设置条码》“二级菜单”栏的最后一位数字，内容空则为 0。					
		[7:0]	《二、菜单设置条码》“三级菜单”栏的最后一位数字，内容空则为 0。					
	CMD	[7:4]	When the value is 0x0, the Command is a Programming Command。					
			When the value is 0x1, the Command is a Inquiry Command。					
	Status:	[3:0]	When the value is 0x0, Command is normal.					
			When the value is 0x1, Command is abnormal.					
	6.Package No.: Initial value is 0x00, and it will increase with the number of packets sent during sub-packet transmission.							
	7. Data length: the length of the data segment in the current command. If the total length of							

	the last command is set to 64byte, the packet label needs to be increased by 1 and then a supplementary command with a data length of 0byte is used to determine that the communication has ended. . If the get status command gets 64bytes, the packet label number needs to be increased by 1 and then another get command is issued to determine whether the communication has ended.
	8.Data: The data content is determined by the corresponding instruction number. When the data length is 0byte, there is no need to fill in the content of this section.
	9.CRC16: CRC16 check is to perform CRC16 check on all data between the beginning of the packet header and before the CRC16 check. The verification is carried out in byte order starting from the packet header. Online calculation of CRC check: https://www.lammertbies.nl/comm/info/crc-calculation, check data type is Hex, parameter model select CRC-16/IBM
	10.End of packet: 0x50 0x41, used to determine the end of the command transmission.

Appendix4 ASCII Character and Keystroke Table

Char	HEX	ASCII Character	Value	Keystroke
NUL (Null char.)	0x00	Null	0x00	Ctrl+2
SOH (Start of Header)	0x01	Keypad Enter	0x58	Ctrl+A
STX (Start of Text)	0x02	Caps Lock	0x39	Ctrl+B
ETX (End of Text)	0x03	Null	0x00	Ctrl+C
EOT (End of Transmission)	0x04	Null	0x00	Ctrl+D
ENQ (Enquiry)	0x05	Null	0x00	Ctrl+E
ACK (Acknowledgment)	0x06	Null	0x00	Ctrl+F
BEL (Bell)	0x07	Enter	0x28	Ctrl+G
BS (Backspace)	0x08	Left Arrow	0x50	Ctrl+H
HT (Horizontal Tab)	0x09	Horizontal Tab	0x2b	Ctrl+I
LF (Line Feed)	0x0a	Down Arrow	0x51	Ctrl+J
VT (Vertical Tab)	0x0b	Vertical Tab	0x2b	Ctrl+K
FF (Form Feed)	0x0c	Backspace	0x2a	Ctrl+L
CR (Carriage Return)	0x0d	Enter	0x28	Ctrl+M
SO (Shift Out)	0x0e	Insert	0x49	Ctrl+N
SI (Shift In)	0x0f	Esc	0x29	Ctrl+O
DLE (Data Link Escape)	0x10	F11	0x44	Ctrl+P
DC1 (XON) (Device Control 1)	0x11	Home	0x4a	Ctrl+Q
DC2 (Device Control 2)	0x12	Print Screen	0x46	Ctrl+R

DC3 (XOFF) (Device Control 3)	0x13	Delete	0x4c	Ctrl+S
DC4 (Device Control 4)	0x14	tab+shift	0x2b,0xe1	Ctrl+T
NAK (Negative Acknowledgement)	0x15	F12	0x45	Ctrl+U
SYN (Synchronous Idle)	0x16	F1	0x3a	Ctrl+V
ETB (End of Trans. Block)	0x17	F2	0x3b	Ctrl+W
CAN (Cancel)	0x18	F3	0x3c	Ctrl+X
EM (End of Medium)	0x19	F4	0x3d	Ctrl+Y
SUB (Substitute)	0x1a	F5	0x3e	Ctrl+Z
ESC (Escape)	0x1b	F6	0x3f	Ctrl+[
FS (File Separator)	0x1c	F7	0x40	Ctrl+\
GS (Group Separator)	0x1d	F8	0x41	Ctrl+]
RS (Request to Send)	0x1e	F9	0x42	Ctrl+6
US (Unit Separator)	0x1f	F10	0x43	Ctrl+-

Appendix5 ASCII Table

(Character in yellow ground is Function Character; Character in white ground is Visible

Character)

Binary	Dec	Hex	Char
0	0	0	NUL (NULL)
1	1	1	SOH (Start Of Heading)
10	2	2	STX (Start Of Text)
11	3	3	ETX (End Of Text)
100	4	4	EOT (End Of Transmission)
101	5	5	ENQ (Enquiry)
110	6	6	ACK (Acknowledge)
111	7	7	BEL (Bell)
1000	8	8	BS (Backspace)
1001	9	9	HT (Horizontal Tab)
1010	10	0A	LF/NL(Line Feed/New Line)
1011	11	0B	VT (Vertical Tab)
1100	12	0C	FF/NP (Form Feed/New Page)
1101	13	0D	CR (Carriage Return)
1110	14	0E	SO (Shift Out)
1111	15	0F	SI (Shift In)
10000	16	10	DLE (Data Link Escape)

10001	17	11	DC1/XON
			(Device Control 1/Transmission On)
10010	18	12	DC2 (Device Control 2)
10011	19	13	DC3/XOFF
			(Device Control 3/Transmission Off)
10100	20	14	DC4 (Device Control 4)
10101	21	15	NAK (Negative Acknowledge)
10110	22	16	SYN (Synchronous Idle)
10111	23	17	ETB (End of Transmission Block)
11000	24	18	CAN (Cancel)
11001	25	19	EM (End of Medium)
11010	26	1A	SUB (Substitute)
11011	27	1B	ESC (Escape)
11100	28	1C	FS (File Separator)
11101	29	1D	GS (Group Separator)
11110	30	1E	RS (Record Separator)
11111	31	1F	US (Unit Separator)
100000	32	20	(Space)
100001	33	21	!
100010	34	22	"
100011	35	23	#

100100	36	24	\$
100101	37	25	%
100110	38	26	&
100111	39	27	'
101000	40	28	(
101001	41	29	)
101010	42	2A	*
101011	43	2B	+
101100	44	2C	,
101101	45	2D	-
101110	46	2E	.
101111	47	2F	/
110000	48	30	0
110001	49	31	1
110010	50	32	2
110011	51	33	3
110100	52	34	4
110101	53	35	5
110110	54	36	6
110111	55	37	7
111000	56	38	8
111001	57	39	9

111010	58	3A	:
111011	59	3B	;
111100	60	3C	<
111101	61	3D	=
111110	62	3E	>
111111	63	3F	?
1000000	64	40	@
1000001	65	41	A
1000010	66	42	B
1000011	67	43	C
1000100	68	44	D
1000101	69	45	E
1000110	70	46	F
1000111	71	47	G
1001000	72	48	H
1001001	73	49	I
1001010	74	4A	J
1001011	75	4B	K
1001100	76	4C	L
1001101	77	4D	M
1001110	78	4E	N
1001111	79	4F	O

1010000	80	50	P
1010001	81	51	Q
1010010	82	52	R
1010011	83	53	S
1010100	84	54	T
1010101	85	55	U
1010110	86	56	V
1010111	87	57	W
1011000	88	58	X
1011001	89	59	Y
1011010	90	5A	Z
1011011	91	5B	[
1011100	92	5C	\
1011101	93	5D	]
1011110	94	5E	^
1011111	95	5F	_
1100000	96	60	`
1100001	97	61	a
1100010	98	62	b
1100011	99	63	c
1100100	100	64	d
1100101	101	65	e

1100110	102	66	f
1100111	103	67	g
1101000	104	68	h
1101001	105	69	i
1101010	106	6A	j
1101011	107	6B	k
1101100	108	6C	l
1101101	109	6D	m
1101110	110	6E	n
1101111	111	6F	o
1110000	112	70	p
1110001	113	71	q
1110010	114	72	r
1110011	115	73	s
1110100	116	74	t
1110101	117	75	u
1110110	118	76	v
1110111	119	77	w
1111000	120	78	x
1111001	121	79	y
1111010	122	7A	z
1111011	123	7B	{

1111100	124	7C	
1111101	125	7D	}
1111110	126	7E	~
1111111	127	7F	DEL (Delete)

