



# FM700B-NFC 2D SCANNER

## USER MANUAL



---

## **About This User Manual**

Please read all the content of the user manual carefully to use the products safely and effectively. You are advised of keeping it properly for your using reference.

### **Disclaimer**

Please do not dismantle the product or tear up the seal on it, otherwise we won't provide warranty or replacement service.

The pictures in this user guide are for reference only. If there are any pictures which not match the actual product, please take actual products as the standard. Updated information is subject to change without notice.

All information contained in this guide are protected by copyright, and Shenzhen YIDA Auto-ID Technology Co., Ltd. reserves all rights. All or part of this guide is prohibited to excerpt, copy, bundle other products, or sell without the written permission from us.

### **Service Information**

For technical assistant or product service and repair, please contact YidaScan. Visit our website to learn more: [www.yidascan.com](http://www.yidascan.com)

---

---

## Revision

Version	Description	Date
V1.0	Initial Release	2023.04.20
V1.1	1. Modify "Level Trigger Mode" to only support command setting. 2. Add NFC card support list.	2023.05.22
V1.2	1. Added NFC settings	2023.11.06

---

---

# Table of Content

Preview .....	1
Introduction .....	1
Chapter Description .....	1
Explanation of Icons .....	2
Chapter1 About FM700B .....	3
Introduction .....	3
Dimension:(mm) .....	3
Interface .....	5
12-pin FPC Connector .....	5
8-PIN Box Connector .....	6
NFC Types .....	7
Symbology Chart .....	8
Chapter2 System Setting .....	10
Introduction .....	10
Programming Barcode .....	10
Use of Programming Barcode .....	11
Restore to Factory Default .....	12
Query Firmware Version .....	12
User Preference .....	12
Beeper .....	13
Beeper Volume .....	13

---

---

Power on Beep .....	13
Enable/Disable Beeper .....	13
Good Read Beep Duration .....	14
Error Beep .....	14
Command-Setup Beep .....	14
<b>Illumination LED .....</b>	<b>15</b>
<b>Decode Indicator LED .....</b>	<b>15</b>
<b>System Upgrade .....</b>	<b>16</b>
<b>Chapter 3 Scan Mode .....</b>	<b>17</b>
<b>Sense Mode .....</b>	<b>17</b>
Sense Mode .....	17
Decode Session Timeout .....	17
Set Custom Decode Session Timeout .....	18
<b>Continuous Scan (default) .....</b>	<b>18</b>
<b>Reread Timeout .....</b>	<b>18</b>
<b>Bad Read Message .....</b>	<b>19</b>
<b>Chapter 4 Interface .....</b>	<b>21</b>
<b>USB Interface .....</b>	<b>21</b>
USB HID (default) .....	21
Function Key Mapping .....	22
GS Characters Replace .....	22
Data Upload Method .....	23

---

---

USB Keyboard Transmission Speed .....	23
Control Character .....	24
Polling Speed .....	24
Emulate Keypad .....	24
CapsLock .....	25
USB Countries Keyboard .....	25
USB CDC .....	27
<b>RS232</b> .....	27
RS-232 .....	27
RS-485 .....	27
RS-485- Device ID .....	28
Baud Rate .....	28
Stop Bit .....	29
Parity Check .....	29
<b>Wiegand</b> .....	31
Wiegand Format .....	31
<b>NFC</b> .....	31
NFC On/Off .....	31
NFC Decode Session Timeout .....	32
NFC Reread Timeout .....	33
NFC Data Type .....	34
NFC Prefix .....	35

---

---

NFC Suffix .....	35
ISO/IEC 14443 A/B .....	37
FeliCa .....	37
NFC Command Mode .....	37
NFC Command Mode and Data Format .....	37
NFC Command Mode Write URI Data Command Settings .....	38
NFC Continuous working time setting .....	39
<b>Chapter5 Data Format .....</b>	<b>40</b>
<b>Input/Output Data Format .....</b>	<b>40</b>
Input Data Format .....	40
Output Data Format .....	41
<b>Prefix/Suffix Sequence .....</b>	<b>41</b>
<b>Custom Prefix .....</b>	<b>42</b>
Enable/Disable Custom Prefix .....	42
Set Custom Prefix .....	43
<b>Custom Suffix .....</b>	<b>43</b>
Enable/Disable Custom Suffix .....	43
Set Custom Suffix .....	44
<b>Code ID .....</b>	<b>45</b>
Code ID Prefix/Suffix .....	45
Set Custom Code ID .....	45
<b>AIM ID .....</b>	<b>46</b>

---

---

Terminator Suffix .....	46
Convert Case .....	47
<b>Chapter 6 Symbologies .....</b>	<b>48</b>
Introduction .....	48
Enable/Disable .....	48
Enable/Disable All 1D Barcodes .....	48
Enable/Disable All 2D Symbologies .....	50
Inverse Barcode .....	50
1D Inverse Barcode .....	50
2D Inverse Barcode .....	50
<b>EAN-13 .....</b>	<b>51</b>
On/Off .....	51
Check Digit .....	51
2 Digit Add-On Code .....	51
5 Digit Add-On Code .....	51
<b>ISSN .....</b>	<b>52</b>
On/Off .....	52
<b>ISBN .....</b>	<b>52</b>
On/Off .....	52
<b>UPC-A .....</b>	<b>52</b>
On/ Off .....	52
Check Digit .....	53

---



---

2 Digit Add-On Code .....	53
5 Digit Add-On Code .....	53
Numeric System Character .....	53
<b>UPC-E .....</b>	<b>55</b>
On/Off .....	55
Check Digit .....	55
Convert UPC-E to UPC-A .....	55
2 Digit Add-on Code .....	56
5 Digit Add-on Code .....	56
Numeric System Character .....	56
<b>Inverse UPC/EAN .....</b>	<b>56</b>
<b>Code 128/GS1-128 .....</b>	<b>58</b>
Code 128On/ Off .....	58
Set Length for Code 128 .....	58
Code 128 Variants .....	58
Inverse Code 128/GS1-128 .....	59
<b>Code 39 .....</b>	<b>59</b>
On/ Off .....	59
Start/Stop Character .....	60
Code 39 Full ASCII .....	60
Inverse Code39 Full ASCII .....	60
Set Length Range for Code39 .....	61

---

---

<b>Code32/Trioptic Code 39</b> .....	62
Code32 On/ Off .....	62
Trioptic Code 39 On/ Off .....	62
<b>Code 93</b> .....	63
On/ Off .....	63
Set Length Range for Code 93 .....	63
Inverse Code93 .....	64
<b>Codabar</b> .....	64
On/ Off .....	64
Start/Stop Character .....	64
Check Digit .....	65
Set Length Range for Codabar .....	65
Inverse Codabar .....	66
<b>Interleaved 2 of 5 (ITF5)</b> .....	66
On/ Off .....	66
Check Digit .....	66
Set Length Range for ITF5 .....	67
Inverse ITF5 .....	68
<b>Industrial 2 of 5</b> .....	68
On/ Off .....	68
Set Length Range for Industrial 2 of 5 .....	68
<b>Matrix 2 of 5</b> .....	69

---

---

On/ Off .....	69
Check Digit .....	69
Set Length Range for Matrix 2 of 5 .....	70
Check Digit .....	70
<b>Code 11 .....</b>	<b>71</b>
On/ Off .....	71
Set Length Range for Code 11 .....	71
<b>MSI-Plessey .....</b>	<b>72</b>
On/ Off .....	72
Check Digit .....	72
Set Length Range for MSI-Plessey .....	74
<b>GS1-DataBar (RSS) .....</b>	<b>74</b>
RSS-14 On/ Off .....	74
RSS-Limited On/ Off .....	75
RSS-Expanded On/ Off .....	75
Set Length Range for .....	75
<b>Micro QR Code .....</b>	<b>76</b>
Micro QR Code .....	76
Inverse Micro QR Code .....	76
Mirror Micro QR Code .....	76
<b>QR Code .....</b>	<b>77</b>
Inverse QR Code .....	77

---

---

Mirror QR Code .....	77
QR Code with URL .....	77
<b>Data Matrix</b> .....	<b>78</b>
Inverse Data Matrix .....	78
Mirror Data Matrix .....	78
DPM .....	79
<b>PDF417</b> .....	<b>79</b>
On/ Off .....	79
Inverse PDF417 .....	79
<b>Micro PDF417</b> .....	<b>80</b>
<b>Aztec Code</b> .....	<b>80</b>
Inverse Aztec Code .....	80
Mirror Aztec Code .....	81
<b>HANXIN</b> .....	<b>81</b>
<b>Dot Code</b> .....	<b>81</b>
Inverse Dot Code .....	82
<b>Grid Matrix</b> .....	<b>82</b>
<b>Hong Kong 2 of 5(China Post)</b> .....	<b>82</b>
<b>NEC 2 of 5</b> .....	<b>82</b>
<b>Telepen</b> .....	<b>83</b>
<b>Maxicode</b> .....	<b>83</b>
<b>Straight 2 of 5 IATA</b> .....	<b>83</b>

---

---

Appendix.....	83
Appendix 1 Data and Digit Barcodes.....	83
Appendix 2 Symbologies Table.....	87
Appendix3 Control Escape Character.....	89
Appendix 4 ASCII Table.....	90
Appendix 5 Code ID Table.....	94
Appendix 6 Prefix/Suffix Control Character Table.....	97

---

# Preview

## Introduction

This manual provides detailed instructions for setting up and using the FM700B scanner.

## Chapter Description

《Chapter1 About FM700B》

Introduces three configuration methods and

《Chapter2 System Setting 》

describes how to configure general parameters of the FM700B

《Chapter3 Scan Mode》

Describes different scan modes and relevant parameters.

《Chapter4 Interface》

Describes how to configure different interface parameter

《Chapter5 Data Format》

Describe how to customize scanned data

《Chapter6 Sysmbologies》

Lists all compatible symbologies and describes how to configure the relevant parameters.

《Appendix》

Provides factory defaults table and a bunch of frequently used programming barcodes.

## Explanation of Icons



This icon indicates this information requires extra attention from the reader.



This icon indicates handy tips that can help you use or configure the engine with ease.



This icon indicates practical examples that can help you to acquaint yourself with operations.

# Chapter1 About FM700B

## Introduction


The FM700B NFC is an area image scanner for barcode reading and NFC tags. It includes two illumination LEDs, two Good Read LEDs, one 12-pin FPC connector and two 8-pin box connectors(for USB, RS232, TTL, RS485, Wiegand interfaces).

The FM700B contains:

- 1x CMOS Sensor
- 2x Illumination LED
- 2x Indicator LED



## Dimension:(mm)

Front View

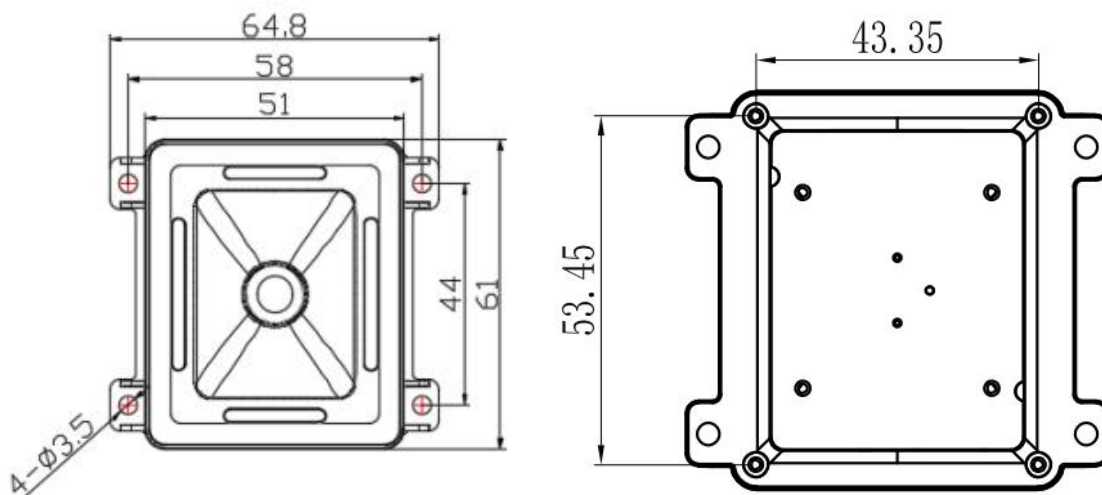




Side View

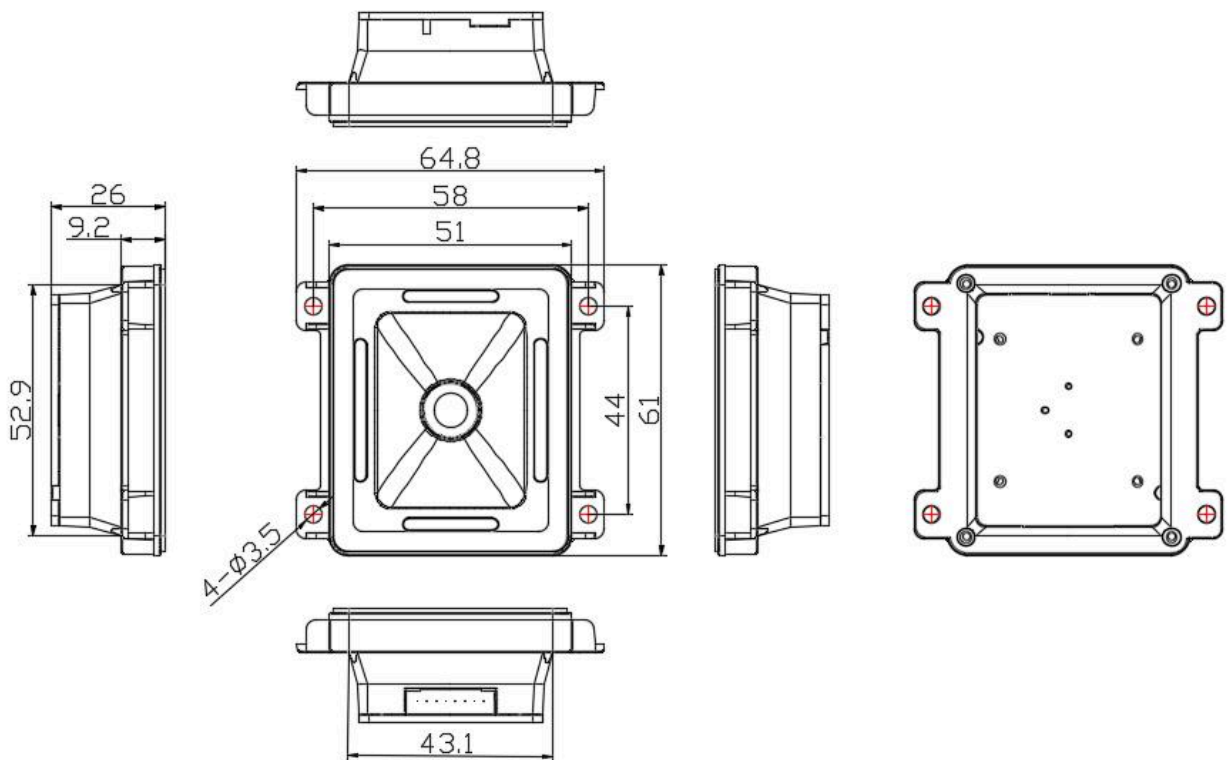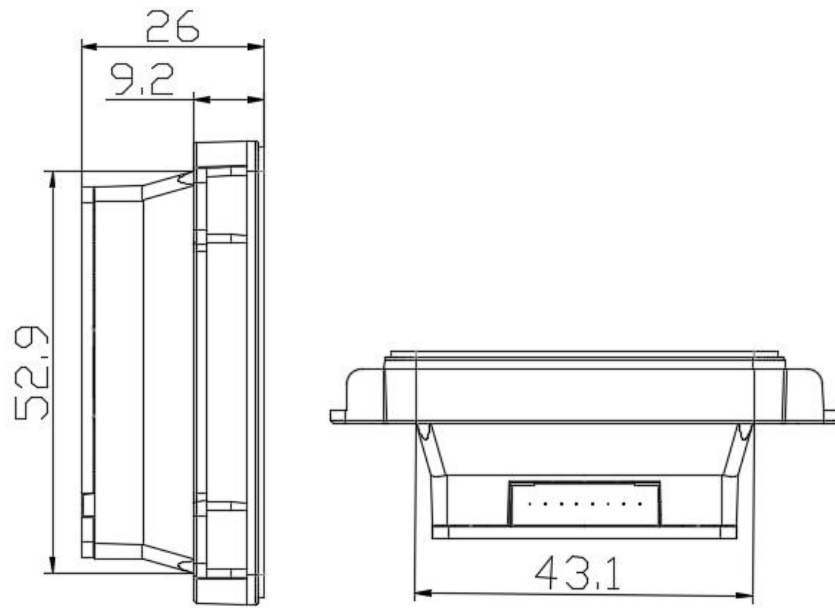

Horizontal:

74°


水平视角角度

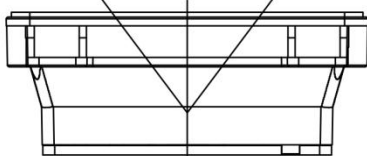

Vertical:

65°

垂直视角角度

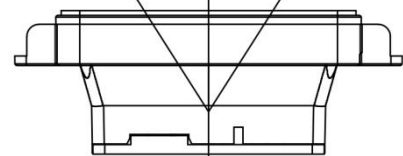


## Interface

The physical interface of the FM700B NFC consists of a 12-pin FPC connector and two 8-pin box connectors:

- 12-pin FPC connector can be used as TTL-232 interface or USB interface.

One 8-pin box connector can be used as standard USB interface and the other as RS-232 interface

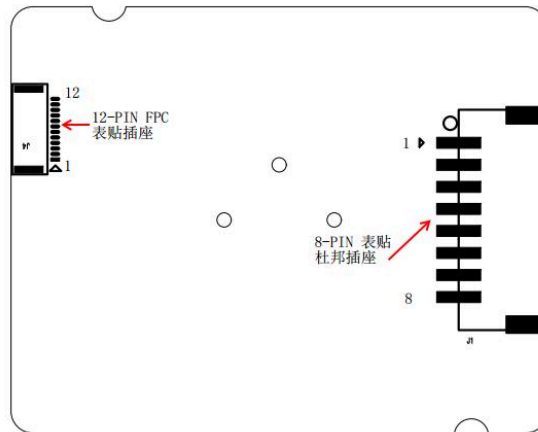

### 12-pin FPC Connector

PIN#	Sig	I/O	Funcio
1	nTRIG	I	Trigger
2	nRESET	I	Reset
3	LED	O	LED
4	Buz	O	Beeper Output
5	PIN 8	-	NULL
6	USB_DP	I/O	USB D+ Signal
7	USB_DN	I/O	USB D- Signal

8	TXD	O	TTL Send
9	RXD	I	TTL Receive
10	GND	-	Ground
11	VIN	-	5V Power Supply
12	NC	-	

### 8-PIN Box Connector

PIN#	Signal	I/O	Function
1	POW_IN	-	5V Power Supply Input
2	GND	-	Power Supply Ground
3	RS232_RX/RS485 _B/WG_DATA1	I/O	RS232-RXD/TTL-232-RXD/RS485B-
4	RS232_TX/RS485 _A/WG_DATA0	I/O	RS232-TXD/TTL-232-TXD/RS485A-
5	USB_DP	I/O	USB_D+ Signal
6	USB_DN	I/O	USB_D- Signal
7	LED	O	LED
8	nTRIG	I	Trigger

## NFC Types

Standard	Type	Card Type
ISO 14443A	Type 1 Tag	Topaz 512
ISO 14443A	Type 2 Tag	Mifare ultralight NTAG216
ISO 14443A	Type 2 Tag	Mifare ultralight-C
ISO 14443A	Type 2 Tag	NTAG215
ISO 14443A	Type 2 Tag	Mifare UL
ISO 14443A	Type 2 Tag	NTAG213
ISO 14443A	Type 2 Tag	NTAG203
ISO 14443B	Type 4 Tag	Type B
ISO 14443A	Type 4 Tag	Mifare DESFIRE EV1 2K
ISO 14443A	Type 4 Tag	Mifare DESFIRE D42
ISO 14443A	Type 4 Tag	Mifare DESFIRE D82
ISO 14443A	Type 7 Tag	Mifare plus 4k (X)
ISO 14443A	Type 7 Tag	Mifare plus 4k (S)
ISO 14443A	Type 7 Tag	Mifare S50
ISO 14443A	Type 7 Tag	Mifare S50
ISO 14443A	Type 7 Tag	Mifare S70
ISO 14443A	Type 7 Tag	Mifare S70
ISO 15693	Type 6 Tag	ICODE SLI-X
ISO 15693	Type 6 Tag	ICODE SLI
ISO 15693	Type 6 Tag	ICODE SLI S
ISO 15693	Type 5Tag	ICODE SLI-X2
ISO 15693	Type 6 Tag	TI2048
JIS*6319-4	Type 3 Tag	Felica lite

## Symbology Chart

Type	Barcode Type	Support	Default On
1D	Codabar	√	×
	Code 11	√	×
	Code 128	√	√
	ISBT 128	√	√
	GS1 128	√	√
	Code 32	√	×
	Code 39	√	√
	Trioptic Code 39	√	×
	Code 93	√	√
	EAN-8	√	√
	EAN-13	√	√
	ISBN	√	√
	ISSN	√	√
	GS1 DataBar	√	×
	GS1 DataBar Limited	√	×
	GS1 DataBar Expanded	√	×
	GS1 DataBar Stacked	√	×
	GS1 Composite	×	×
	Hong Kong 2 of 5(China post)	√	×
	Interleaved 2 of 5	√	×
	Industrial 2 of 5	√	×
	Matrix 2 of 5	√	×
	NEC 2 of 5	√	×
	Straight 2 of 5 IATA	√	×
	MSI Plessey	√	×
	Plessey	×	×
	UPC-A	√	√
	UPC-E0	√	√
UPC-E1	√	×	
Telepen	√	×	

Type	Barcode Type	Support	Default On
2D	Aztec Code	√	×
	HANXIN	√	×
	Codablock A	√	×
	Codablock F	√	×
	Data Matrix Code (DPM)	√	×
	Maxicode	√	×
	PDF417	√	×
	Micro PDF417	√	×
	QR Code	√	√
	Micro QR Code	√	√
	DOT Code	√	×
	Grid Matrix Code	√	×
USPS 4-State Customer Barcode	×	×	

## Chapter2 System Setting

### Introduction

The FM700B can be configured by scanning programming barcodes. All user programmable features/options are described along with their programming barcodes/commands in the following sections. This programming method is most straightforward.

### Programming Barcode

 


The figure above is an example that shows you the programming barcode:


- 1.The programming barcode.
- 2.The description of feature/option.

## Use of Programming Barcode

Scanning the **Enter Setup** barcode can enable the scanner to enter the setup mode. Then you can scan a number of programming barcodes to configure your scanner. To exit the setup mode, scan the **Exit Setup** barcode or a non-programing barcode, or reboot the scanner



Enter Setup (default)

 

Exit Setup



---

## Restore to Factory Default



Restore to factory default



Factory Default- Inverse Code

## Query Firmware Version



 
Query Firmware Version

## User Preference

User can set up his/her preference of the scanner.



Save User Preference



Restore to User Preference

---

## Beeper

### Beeper Volume

This setting is only for "Good Read Beep Volume" and "Error Beep Volume"

 


High Volume (default)




Low Volume

### Power on Beep




On (default)

 

Off

### Enable/Disable Beeper

 This setting is only for "Good Read Beep" and "Error Beep"



Enable (default)



Disable

---

## Good Read Beep Duration

This setting is only for **Good Read Beep**. The default value is 80ms.



Short (40ms)



Long(80ms) (Default)

## Error Beep

 


On (default)




Off

## Command-Setup Beep



On (default)

 

Off


---

## Illumination LED



 Normal (default)

Noted: In sense mode, the illumination led must be in normal mode, and the state of the illumination led cannot be changed (FM700B (NFC) only).




Always on




Always Off

## Decode Indicator LED

 

On (default)

 


Off

---

## System Upgrade

Please connect the scanner with a USB cable for firmware upgrade.

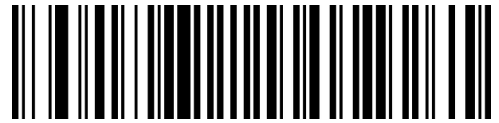

Firmware Upgrade

Steps to upgrade firmware:

1. Plug the scanner with a USB cable;
2. Scan **Firmware Upgrade** barcode to enter USB driver mode and wait for USB driver showing up on the computer;
3. Copy the firmware file into the USB driver;
4. Eject the USB driver and replug the usb cable to restart up the scanner and the scanner will start the firmware upgrade procedure.
5. The scanner beeps after firmware upgrading.

**Example**

If the upgrade is successful, the factory settings will be restored, and users can reset the scanner according to their needs.

**ATT**

If the upgrade fails, you need to re-power on and restart the scanner and perform the above upgrade steps again.

# Chapter 3 Scan Mode

## Sense Mode

### Sense Mode

The scanner activates a decode session every time it detects a barcode presented to it.

The decode session continues until a barcode is decoded or the decode session

timeout expires. Reread Timeout can avoid undesired rereading of same barcode in a

given period of time.



Sense Mode

**Noted:** In sense mode, the illumination led must be in normal mode, and the state of the illumination led cannot be changed (FM700B (NFC) only).

### Decode Session Timeout

This parameter sets the maximum time decode session continues during a scan

attempt. The Short, Medium, Long represent 3s, 7s, 10s. The default value is 3s.



Short (default)



Medium



Long



Enable Custom Decode Session Timeout

---

## Set Custom Decode Session Timeout

It's programmable in 0.1s increments from 1 to 999. The default setting is 3s.



Set Custom Decode Session Timeout

### Example

Set the decode session timeout to 10s:

- 1、 Scan **Set Custom Decode Session Timeout** Barcode
- 2、 Scan the numeric barcodes: "1"0" from the "Digital barcodes" section in Appendix1.
- 3、 Scan the **Save** barocde in Appendix1

## Continuous Scan (default)

The scanner automatically starts one decode session after another. Reread Timeout can avoid undesired rereading of same barcode in a given period of time



Continuous Scan (default)

## Reread Timeout

Reread Timeout can avoid undesired rereading of same barcode in a given period of time.

This feature is only applicable to the Sense and Continuous modes.

It's programmable from 0 to 65535ms, 500ms is the default value.



500ms (default)



0 ms



1s



Set Custom Reread Timeout

## Bad Read Message

Scan the appropriate barcode below to select whether or not to send a bad read message (user-programmable) when a good read does not occur before trigger release, or the decode session timeout expires, or the engine receives the Stop Scanning command.

The default setting is "NG"



On



Off (default)





Set Bad Read Message

# Chapter 4 Interface

## USB Interface

USB HID (default)



USB HID

---

## Function Key Mapping



Enable



Disable (default)

## GS Characters Replace



Do Not Replace (default)



Replace with Ç



Replace with |



Replace with ^]



Replace with ]



Replace with <GS>



Replace with (GS)

---

## Data Upload Method



Software



Keyboard (default)



Both Software and Keyboard

## USB Keyboard Transmission Speed



5 s(default)



10 s



20 ms



Set Custom Speed

---

## Control Character



Off (default)



Control + ASCII Mode (Ctrl+ASCII)



Alt + Keypad Mode (Alt+Keypad)

## Polling Speed



 
1ms



5ms (default)



10ms



Set Custom Polling Speed

## Emulate Keypad

Number output through Keypad



Off

 


On (default)

"+"-"\*"/" Output through Keypad




Off (default)



On

 CapsLock



On



Off (default)

USB Countries Keyboard



America (English) (default)



Italian(Italy)



Spanish(Spain)



Portuguese (Portugal)



Portuguese (Brazil)



French(France)



French(Belgium)



German(Austria)



German(Swiss)



Turkish Q



Turkish F



English(UK)



Japanese(Japan)



Italian (Italy) cannot output "~"

Portuguese (Brazil) does not output "?" and "/"

Japanese (Japan) needs to be switched to English

## USB CDC

If your engine is connected to the USB port on a host device, the USB CDC feature allows the host device to receive data in the way as a serial port does. A driver is needed when using this feature. You may download it from our website at [www.chinayoko.com](http://www.chinayoko.com)



USB CDC

## RS232

### RS-232

When the scanner is connected to the RS-232 port of a host device, you need to set communication parameters (including baud rate, parity check, data bit and stop bit) on the scanner to match the host device so that two devices can communicate with each other.



RS-232

### RS-485

Switch to RS-485 Interface





## RS-485- Device ID

Default device ID value is 0x00.



Set Device ID

### Example

Set RS485 Device ID as 0x01:

2.Scan **Set Device ID** barcode.

3.Scan numeric barcode "0" "1" from the Digit Barcodes in appendix 1.

4.Scan **Save** barcode in appendix 1.

## Baud Rate

Baud rate is the number of bits of data transmitted per second. Set the baud rate to match the host requirements.



Baud Rate 4800



Baud Rate



Baud Rate 9600 (default)



Baud Rate 19200



Baud Rate 57600



Baud Rate 38400



Baud Rate 115200

## Stop Bit



Stop Bit 1 (default)



Stop 2

## Parity Check

Set the parity type to match the host requirements.

**Odd Parity:** If the data contains an odd number of 1 bits, the parity bit value is set to 0.

**Even Parity:** If the data contains an even number of 1 bits, the parity bit value is set to 0.

**None:** Select this option when no parity bit is required.

The stop bit(s) at the end of each transmitted character marks the end of transmission of one character and prepares the

receiving device for the next character in the serial data stream. Set the number of stop bits to match the host requirements.



No Parity Check (Default)



Odd Parity



Even Parity

---

## Wiegand



Wiegand Interface

### Wiegand Format



Wiegand 26 (default)



Wiegand 34



Wiegand 32

## NFC

### NFC On/Off



Off



On (default)

---

## NFC Decode Session Timeout

This parameter sets the maximum time decode session continues during a NFC scan attempt. The default value is 50ms. Setup range is : 10ms~1000ms.



50ms (default)



1000ms



Set Custom NFC Decode Session Timeout

### Example

Set Custom NFC Decode Session Timeout to 12ms:

- 1.Scan **Enter Setup** barcode.
- 2.Scan **Set Custom NFC Decode Session Timeout** barcode
- 3.Scan numeric barcodes "1" "2" from appendix 1
- 4.Scan **Save** barcode
- 5.Scan **Exit Setup** barcode.

---

## NFC Reread Timeout

Reread Timeout can avoid undesired rereading of same NFC Tag in a given period of time.

It's programmable from 0 to 60000ms, 500ms is the default value.



500ms (default)



2000ms



5000ms



Set custom NFC Reread Timeout

### Example

Set Custom NFC Reread Timeout to 1000ms:

1. Scan **Enter Setup** barcode.
2. Scan **Set Custom NFC Reread Timeout** barcode.
3. Scan numeric barcodes "1"0"0"0" from appendix 1.
4. Scan **Save** barcode.
5. Scan **Exit Setup** barcode.

---

## NFC Data Type

NFC UID: Only output UID data.

NFC Detailed data(automatic): Output card details, may contain NDEF data.

NFC detailed data(mandatory): Detailed data of the output card, must contain NDEF data.

 
Detailed data contains: card type, card UID, card NDEF data, data format is as follows (X indicates corresponding data):

```
{"tag":{"uid":"XXX","uid_len":X,"techlogy":"XXX
```

```
Classic"},"ndef":{"max_length":X,"current__length":X,"language":"X","type":"X","content":  
"X"}}}
```



UID Data (default)



Detailed data (automatic)



Detailed data (mandatory)

---

## NFC Prefix

All NFC use one same prefix, setup range 1~11 characters.



Modify the user-defined prefix, after saved, the data of the previous prefix is cleared.



Disable (default)



Enable



Modify NFC Prefix

### Example

Modify NFC prefix to 'a'(a HEX value: 0x61)

1. Scan **Enter Setup** barcode.
2. Scan **Modify NFC Prefix** barcode.
3. ASCII character for "a" is 0x61 after checking appendix 5.
4. Scan digital barcodes "6" "1" in the appendix 1.
5. Scan **Save** barcode.
6. Scan **Exit Setup** barcode.

After setting, as long as the "NFC Custom Prefix" is set to "On", the prefix "a" will be added to the decoded data.

## NFC Suffix

All NFC data share a common suffix data, definable length range 1~11 characters.



---

**ATT**

When a custom suffix is saved, the last suffix data is cleared.



Disable (default)



Enable



Modify NFC Suffix

**Example**

Modify NFC suffix to 'a'(a HEX value: 0x61)

1. Scan **Enter Setup** barcode.
2. Scan **Modify NFC Suffix** barcode.
3. ASCII character for "a" is 0x61 after checking appendix 5.
4. Scan digital barcodes "6" "1" in the appendix 1.
5. Scan **Save** barcode.
6. Scan **Exit Setup** barcode.

After setting, as long as the "NFC Custom Suffix" is set to "On", the suffix "a" will be added to the decoded data.

---

## ISO/IEC 14443 A/B

Reads ISO/IEC 14443 Class A/B NFC cards for read mode reading.



Enable ISO/IEC 14443 A/B Types (default)



Disable ISO/IEC 14443 A/B Types

## FeliCa

Reads ISO/IEC 14443 Class A/B NFC cards for read mode reading.



Enable FeliCa (default)



Disable FeliCa

## NFC Command Mode

Control the type of NFC card and data read by the device through commands, currently adapted to ISO/IEC 14443 class A/B and FeliCa class cards, only effective in NFC command mode, detailed settings can be referred to the "Programming Instruction Manual".

## NFC Command Mode and Data Format

Control the device to write the type of NFC card and text data etc. through commands, currently adapted to ISO/IEC 14443 class A/B and FeliCa class cards, only valid in NFC

---

command mode, detailed settings can be found in the "Programming Command Manual".



Send NFC write command first, then put in NFC card to write data normally.

NFC card needs to support NDEF format, otherwise it can't be written.

## NFC Command Mode Write URI Data Command Settings

Control the device to write NFC card type and URI data etc. through commands, currently adapts to ISO/IEC 14443 Class A/B and FeliCa cards, only valid in NFC command mode, detailed settings can be found in the Programming Command Manual.



Send NFC write command first, then put in NFC card to write data normally.

NFC card needs to support NDEF format, otherwise it can't be written.

## NFC Command Mode Analog Card Access Settings

Through the command to control the device to write the type of NFC card and UID data, etc., automatically exit the analog card after restarting, the scanner into the analog card can not perform other NFC command operations (in addition to the analog card to exit the setup), the current can only simulate the card ISO/IEC 14443 class A and FeliCa class card, does not support the NDEF data simulation, only in the NFC command mode is effective, the detailed setup can be seen in the "Programming Instruction Manual".

## NFC Command Mode Analog Card Exit Setup

Need to exit the analog card to perform other NFC operations, only valid in NFC

---

command mode, detailed settings can be found in the Programming Command Manual.

### NFC Continuous working time setting

The unit is second (s), the time range can be set: 0~60 seconds, the default is 10 s. NFC will continue to work for a period of time after receiving the read command operation, to prevent the next command operation NFC needs to be cold-started, resulting in a decline in the performance of the card reading, the detailed settings can be referred to the "Programming Command Manual".

## Chapter5 Data Format

### Input/Output Data Format

#### Input Data Format

Automatic: recognition of UTF-8 and GBK barcodes;

UTF-8 encoding: recognizes only UTF-8 barcodes;

GBK encoding: recognize GBK barcode only.



Auto (default)



UTF-8



GBK

## Output Data Format



Original Format



UTF-8



GBK (default)



 
Valid for USB CDC serial port, RS-232 serial port, RS-485 serial port and HID POS interface only.

## Prefix/Suffix Sequence



Code ID+Prefix+AIM

ID+Barcode+Suffix+Terminator (default)



Prefix+Code ID+AIM


ID+Barcode+Suffix+Terminator

## Custom Prefix
 
### Enable/Disable Custom Prefix

If custom prefix is enabled, you are allowed to append to the data a user-defined prefix that cannot exceed 10 characters.

For example, if the custom prefix is "AB" and the barcode data is "123", the Host will receive "AB123".



Enable Custom Prefix



Disable Custom Prefix (default)

---

## Set Custom Prefix

To set a custom prefix, scan the **Set Custom Prefix** barcode then the numeric barcodes corresponding to the hexadecimal value of a desired prefix then the **Save** barcode.



Set Custom Prefix

### Example

Set the custom prefix (HEX:0x61) to "a" for all symbolgoies(Code ID: 0x99)

- 1.Scan **Set Custom Prefix** barcode.
- 2.Scan numeric barcode "9"9"6"1" from the digit barcode section in appendix 1.
- 3.Scan **Save** barcode in the appendix 1.
- 4.Scan **Enable Custom Prefix** barcode.

 
## Custom Suffix

### Enable/Disable Custom Suffix

If custom suffix is enabled, you are allowed to append to the data a user-defined suffix that cannot exceed 10 characters.

For example, if the custom suffix is "AB" and the barcode data is "123", the Host will receive "123AB".






Enable Custom Suffix



Disable Custom Suffix (default)

 Set Custom Suffix



Set Custom Suffix

### Example

Set the custom suffix (HEX:0x61) to "a" for all symbolgoies(Code ID: 0x99)


- 1.Scan **Set Custom Suffix** barcode.
- 2.Scan numeric barcode **"9""9""6""1"** from the digit barcode section in appendix 1.
- 3.Scan **Save** barcode in the appendix 1.
- 4.Scan **Enable Custom Suffix** barcode.

---

## Code ID

Code ID can also be used to identify barcode type. Code ID can only consist of one letters.

### Code ID Prefix/Suffix

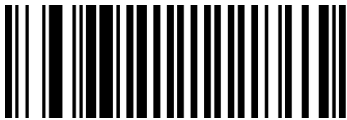


Disable Code ID (default)



Enable Code ID



 Set Custom Code ID



Restore Code ID

### Set Custom Code ID



Set Custom Code ID

### Example

Set Codabar (Code ID:0x61) Code ID to "Y" (Hex: 0x59) :

 
1. Scan **Set Custom Code ID** barcode.
2. Scan numeric barcode "6"1"5"9" from the digit barcodes section in the appendix 1
3. Scan **Save** barcode in the appendix 1

---


## AIM ID

AIM (Automatic Identification Manufacturers) ID defines symbology identifier (For the details, see the "AIM ID Table"

section in Appendix). If AIM ID prefix or suffix is enabled, the engine will add the symbology identifier before or after the scanned data after decoding.



Disable AIM ID (default)

 


Enable AIM ID

## Terminator Suffix



 Set Terminator Suffix to CR (default)  
(Carriage Return)



Set Terminator Suffix to LF  
(Line Feed)



Set Terminator Suffix to CRLF  
(Carriage Return+Line Feed)



Set Terminator Suffix to TAB




Set Terminator Suffix to ETX




Disable Terminator Suffix


## Convert Case

 


No Case Conversion (default)

 

Convert All to Upper Case

 

Convert the Case

 

Convert All to Lower Case


# Chapter 6 Symbologies
 
## Introduction


Every symbology (barcode type) has its own unique attributes. This chapter provides programming barcodes for configuring the engine so that it can identify various symbologies. It is recommended to disable those that are rarely used to increase the efficiency of the scanner.

## Enable/Disable


If the **Disable All Symbologies** feature is enabled, the engine will not be able to read any non-programming barcodes except the programming barcodes.



Enable All Symbologies

 

Disable All Symbologies

 

Restore All Symbologies

## Enable/Disable All 1D Barcodes



Enable All 1D Barcodes



Restore All 1D Barcodes



Disable All 1D Barcodes

 
## Enable/Disable All 2D Symbologies



Enable All 2D Symbologies



Disable All 2D Symbologies



Restore All 2D Symbologies

## Inverse Barcode

1D Inverse Barcode



Only Decode Regular 1D Barcodes (default)



Decode Regular and Inverser 1D Barcodes

2D Inverse Barcode



Only Decode Regular 2D Barcodes (default)



Decode Regular and Inverser 2D Barcodes

## EAN-13

On/Off



EAN13 On (Default)



EAN13 Off

Check Digit



Transmit EAN13 Check Digit (Default)



Do not Transmit EAN13 Check Digit

2 Digit Add-On Code



Enable



Disable (Default)

5 Digit Add-On Code



Enable



Disable (Default)



## ISSN

On/Off



ISSN On



ISSN Off (Default)

## ISBN

On/Off



ISBN On



ISBN Off (Default)

## UPC-A

On/ Off



UPC-A On (Default)



UPC-A Off

## Check Digit



Transmit UPC-A Check Digit (Default)



Do not Transmit UPC-A Check Digit

## 2 Digit Add-On Code



On

 


Off (Default)

## 5 Digit Add-On Code



On



Off (Default)

## Numeric System Character

The numeric system character is the first digit of UPC-A



On (Default)



Off

# UPC-E

## On/Off



UPC-E0 On (default)



UPC-E0 Off



UPC-E1 On



UPC-E1 Off (Default)

## Check Digit



On UPC-E Check Digit (Default)



Off UPC-E Check Digit

## Convert UPC-E to UPC-A



Convert UPC-E to UPC-A



Do not Convert UPC-E to UPC-A Default)



Note whether the check digit, additional code, and numeric system character are On, otherwise the data length may be wrong.

## 2 Digit Add-on Code



Decode 2 Digit Add-On Code



Do not Decode 2 Digit Add-On Code  
(Default)

## 5 Digit Add-on Code



Decode 5 Digit Add-On Code



Do not Decode 5 Digit Add-On Code  
(Default)

## Numeric System Character

The numeric system character is the first digit of UPC-E



Transmit Numeric System Character  
(Default)



Do not Transmit Numeric System Character

## Inverse UPC/EAN

Include Inverse UPC-A, UPC-E0, UPC-E1, EAN8, EAN13.



Only Decode Normal UPC/EAN Barcodes  
(Default)



Decode Both Inverse and Regular UPC/E  
AN Barcodes.

## Code 128/GS1-128

Code 128 On/ Off



Code128 On (Default)



Code128 Off

Set Length for Code 128



Set the Minimum Length



Set the Maximum Length

Code 128 Variants



GS1-128 On (Default)



GS1-128 Off



Codablock F On



Codablock F Off (Default)

## Inverse Code 128/GS1-128



Only Decode Regular Barcode (Default)



Decode both Regular and Inverse Barcodes

## Code 39

On/ Off



Code39 On (Default)



Code39 Off



## Start/Stop Character



Transmit Start/Stop Character



Do not Transmit Start/Stop Character  
(Default)

## Code 39 Full ASCII



On



Off (Default)

## Inverse Code39 Full ASCII



Only Decode Regular Barcode (Default)



Decode both Regular and Inverse Barcodes

## Set Length Range for Code39



Set Minimum Length for Code39



Set the Maximum Length for Code39

 
### Example

Set the scanner to decode Code39 containing between 8 and 12 characters:

1. Scan **Set the Minimum Length** barcode.
2. Scan numeric barcode "8" from the digit barcode in the appendix 1.
3. Scan **Save** barcode in the appendix 1.
4. Scan **Set the Maximum Length** barcode.
5. Scan numeric barcodes "1" "2" from the Digit Barcode in the appendix 1.
6. Scan **Save** barcode in the appendix 1.

## Code32/Trioptic Code 39

Code32 On/ Off



Code32 On



Code32 Off (Default)

 


Inverse Code32 is not available.

Trioptic Code 39 On/ Off

Trioptic Code 39 is a fixed-length code, the data length is fixed at 6 (without start and stop characters), and the data will be output in reverse order.

Example: Trioptice Code 39 barcode data is "123456", then the output data is "456123".




Trioptic Code 39On




Trioptic Code 39 Off (Default)

## Code 93

 On/ Off




Code93 On (Default)

 

Code93 Off

 Set Length Range for Code 93



Set the minimum Length for Code93



Set the Maximum Length for Code93

### Example

Set the scanner to decode Code93 containing between 8 and 12 characters:

1. Scan **Set the Minimum Length** barcode.
2. Scan numeric barcode "8" from the digit barcode in the appendix 1.
3. Scan **Save** barcode in the appendix 1.
4. Scan **Set the Maximum Length** barcode.
5. Scan numeric barcodes "1" "2" from the Digit Barcode in the appendix 1.
6. Scan **Save** barcode in the appendix 1.

## Inverse Code93



Only Decode Regular Barcode (Default)



Decode both Regular and Inverse Barcodes

## Codabar

On/ Off



Codabar On (Default)



Codabar Off

## Start/Stop Character



Transmit Codabar Start/Stop Character



Do not Transmit Codabar Start/Stop Character (Default)

## Check Digit



Off (Default)



On



Enable and Transmit Codabar Check digit

## Set Length Range for Codabar



Set the Minimum Length



Set the Maximum Length

### Example

Set the scanner to decode Codabar containing between 8 and 12 characters:

1. Scan **Set the Minimum Length** barcode.
2. Scan numeric barcode "8" from the digit barcode in the appendix 1.
3. Scan **Save** barcode in the appendix 1.
4. Scan **Set the Maximum Length** barcode.
5. Scan numeric barcodes "1" "2" from the Digit Barcode in the appendix 1.
6. Scan **Save** barcode in the appendix 1.

## Inverse Codabar



Only Decode Regular Barcode (Default)



Decode both Regular and Inverse Barcodes

## Interleaved 2 of 5 (ITF5)

On/ Off



Interleaved 2 of 5 (ITF5) On



Interleaved 2 of 5 (ITF5) Off (Default)

Check Digit



Disable ITF5 Check Digit (Default)



Enable ITF5 Check Digit



Enable and Transmit ITF5 Check Digit

## Set Length Range for ITF5

ITF-6: One of the variant of Interleaved 2 of 5 (ITF5) , after Enable ITF-6, the length range of ITF5 will be fixed to 6.

ITF-14: One of the variant of Interleaved 2 of 5 (ITF5) , after Enable ITF-614, the length range of ITF5 will be fixed to 14.



Set the Minimum Length Range



Set the Maximum Length



Enable ITF-6



Enable ITF-14

### Example

Set the scanner to decode ITF5 containing between 8 and 12 characters:

1. Scan **Set the Minimum Length** barcode.
2. Scan numeric barcode "8" from the digit barcode in the appendix 1.
3. Scan **Save** barcode in the appendix 1.
4. Scan **Set the Maximum Length** barcode.
5. Scan numeric barcodes "1" "2" from the Digit Barcode in the appendix 1.
6. Scan **Save** barcode in the appendix 1.



## Inverse ITF5



Only Decode Regular Barcode (Default)



Decode both Regular and Inverse Barcodes

## Industrial 2 of 5

On/ Off



Industrial 2 of 5 On



Industrial 2 of 5 Off (Default)

## Set Length Range for Industrial 2 of 5



Set the minimum Length



Set the Maximum Length

### Example

 
Set the scanner to decode Industrial 2 of 5 containing between 8 and 12 characters:

1. Scan **Set the Minimum Length** barcode.
2. Scan numeric barcode "8" from the digit barcode in the appendix 1.

3. Scan **Save** barcode in the appendix 1.
4. Scan **Set the Maximum Length** barcode.
5. Scan numeric barcodes "1" "2" from the Digit Barcode in the appendix 1.
6. Scan **Save** barcode in the appendix 1.

## Matrix 2 of 5

On/ Off



Matrix 2 of 5 On



Matrix 2 of 5 Off (Default)

Check Digit



Disable Matrix 2 of 5 Check Digit (Default)



Enable Matrix 2 of Check Digit



Enable and Transmit Matrix 2 of Check D  
igit

## Set Length Range for Matrix 2 of 5



Set the Minimum Length



Set the Maximum Length

### Example

Set the scanner to decode Matrix 2 of 5 containing between 8 and 12 characters:

1. Scan **Set the Minimum Length** barcode.
2. Scan numeric barcode "8" from the digit barcode in the appendix 1.
3. Scan **Save** barcode in the appendix 1.
4. Scan **Set the Maximum Length** barcode.
5. Scan numeric barcodes "1" "2" from the Digit Barcode in the appendix 1.
6. Scan **Save** barcode in the appendix 1.

 
## Check Digit



Disable Matrix 2 of 5 Check Digit (Default)



Enable Matrix 2 of 5 Check Digit




Enable and Transmit Matrix 2 of 5 Check Digit

## Code 11

 On/ Off



Code 11 On



Code 11 Off (Default)

Set Length Range for Code 11



Set the Minimum Length



Set the Maximum Length

### Example

Set the scanner to decode Code 11 containing between 8 and 12 characters:

1. Scan **Set the Minimum Length** barcode.
2. Scan numeric barcode "8" from the digit barcode in the appendix 1.
3. Scan **Save** barcode in the appendix 1.
4. Scan **Set the Maximum Length** barcode.
5. Scan numeric barcodes "1" "2" from the Digit Barcode in the appendix 1.
6. Scan **Save** barcode in the appendix 1.

## MSI-Plessey

On/ Off



MSI-Plessey On



MSI-Plessey Off (Default)

Check Digit



Disable MSI-Plessey Check Digit



Enable MSI-Plessey 1 Digit Check Digit -  
MOD 10 (Default)



Enable MSI-Plessey 2 Digit Check Digit  
MOD 10/MOD 11



Enable MSI-Plessey 2 Digit Check Digit  
MOD 10/MOD 10



Enable but do not transmit MSI-Plessey 2  
Digit Check Digit  
MOD 10/MOD 11



Enable but do not transmit MSI-Plessey 2  
Digit Check Digit  
MOD 10/MOD 10

## Set Length Range for MSI-Plessey



Set the Minimum Length



Set the Maximum Length

### Example

Set the scanner to decode MSI-Plessey containing between 8 and 12 characters:

1. Scan **Set the Minimum Length** barcode.
2. Scan numeric barcode "8" from the digit barcode in the appendix 1.
3. Scan **Save** barcode in the appendix 1.
4. Scan **Set the Maximum Length** barcode.
5. Scan numeric barcodes "1" "2" from the Digit Barcode in the appendix 1.
6. Scan **Save** barcode in the appendix 1.

## GS1-DataBar (RSS)

RSS-14 On/ Off



RSS-14 On



RSS-14 Off (Default)

### RSS-Limited On/ Off



RSS-Limited On



RSS-Limited Off (Default)

### RSS-Expanded On/ Off



RSS-Expanded On



RSS-Expanded Off (Default)

### Set Length Range for



Set the Minimum Length



Set the Maximum Length

## Example

Set the scanner to decode RSS-Expanded containing between 8 and 12 characters:

1. Scan **Set the Minimum Length** barcode.
2. Scan numeric barcode "8" from the digit barcode in the appendix 1.
3. Scan **Save** barcode in the appendix 1.
4. Scan **Set the Maximum Length** barcode.



5. Scan numeric barcodes "1" "2" from the Digit Barcode in the appendix 1.

6. Scan **Save** barcode in the appendix 1.

## Micro QR Code

### Micro QR Code



On



Off (Default)

### Inverse Micro QR Code



On



Off (Default)

### Mirror Micro QR Code



On (Default)



Off

## QR Code



On (Default)

 


Off

## Inverse QR Code



On




Off (Default)

## Mirror QR Code



 On (Default)




Off

## QR Code with URL



 On (Default)



Off

## Data Matrix



On (Default)



Off

## Inverse Data Matrix



On



Off (Default)

## Mirror Data Matrix



On



Off (Default)

## DPM



DPM On



DPM Off (Default)

## PDF417

On/ Off



PDF417 On (Default)



PDF417 Off

## Inverse PDF417



Only Decode Regular PDF417 (Default)



Decode Both Regular and Inverse PDF417

## Micro PDF417



Micro PDF417 On



Micro PDF417 Off (Default)

## Aztec Code



On



Off (Default)

## Inverse Aztec Code



On

 


Off (Default)


## Mirror Aztec Code



Only Decode Regular Aztec Code (Default)




Only Decode Mirror Aztec Code

 

Decode Both Regular and Mirror Aztec Code

## HANXIN

 


HANXIN On



HANXIN Off (Default)

## Dot Code

 


On



Off (Default)

### Inverse Dot Code

 

On



Off (Default)

### Grid Matrix



Grid Matrix On



Grid Matrix Off (Default)

### Hong Kong 2 of 5(China Post)

 


Hong Kong 2 of 5(China Post) On



Hong Kong 2 of 5(China Post) Off (Default)

### NEC 2 of 5



NEC 2 of 5 On




NEC 2 of 5 Off (Default)

## Telepen



 Telepen On



Telepen Off (Default)

## Maxicode

Maxicode Encode Format is from mode0 to mode6, Mode 4 is suggested.



Maxicode On



Maxicode Off (Default)

## Straight 2 of 5 IATA




Straight 2 of 5 IATA On



Straight 2 of 5 IATA Off (Default)






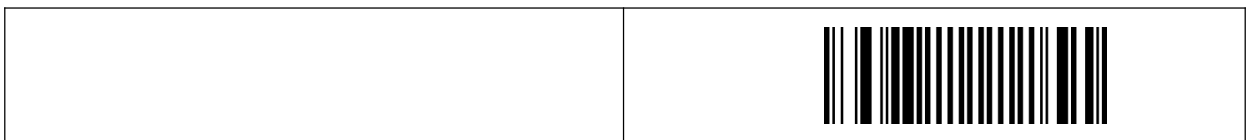




# Appendix
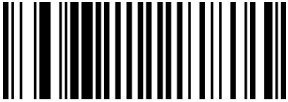 
## Appendix 1 Data and Digit Barcodes







	0
	
1	
	
	2
	
3	
	
	4
	
5	
	
	6
	
7	

	
	8
	
9	
	
	A
	
B	
	
	C
	
D	
	
	E
	
F	
	
	Cancel Last String
	

---

Cancel Current Setting	
	
	Cancel Last Scanning
	
Save	

## Appendix 2 Symbologies Table

Barcode Type	Code ID		AIM ID	
	HEX	Char	Char	Restricted parameters
Codabar	0x61	a	]Fm	0,1
Code 11	0x68	h	]Hm	0,1,3
GS1 128	0x49	l	]C1	
Code 128 (ISBT 128)	0x6a	j	]Cm	0,1,2,4
Code 32	0x3c	<	]X0	
Code 39	0x62	b	]Am	0,1,3,4,5,7
Code 93	0x69	i	]Gm	0-9,A-Z,a-m
Trioptic Code 39	0x3d	=	]X0	
EAN-13 (ISBN)	0x64	d	]Em	0,3
EAN-8	0x44	D	]Em	3,4
GS1 DataBar (GS1 DataBar Stacked)	0x79	y	]em	0
GS1 DataBar Limited	0x7b	{	]em	
GS1 DataBar Expanded	0x7d	}	]em	
Interleaved 2 of 5	0x65	e	]lm	0,1,3
Matrix 2 of 5	0x6d	m	]X0	
Industrial 2 of 5	0x66	f	]S0	
Straight 2 of 5 IATA	0x66	f	]Rm	0,1,3
Hong Kong 2 of 5 (China post)	0x51	Q	]X0	
NEC 2 of 5	0x59	Y	]X0	
Telepen	0x74	t	]Bm	
MSI	0x67	g	]Mm	0,1

UPC-A	0x63	c	]Em	0,3
UPC-E	0x45	E	]Em	0,3
UPC-E1	0x45	E	]X0	
Aztec Code	0x7a	z	]zm	0-9,A-C
HANXIN	0x48	H	]X0	
Maxicode	0x78	x	]Um	0-3
DOT Code	0x2e	.	]X0	
Grid Matrix Code	0x58	X	]X0	
Codablock F	0x71	q	]Om	0,1,4,5,6
Data Matrix	0x77	w	]dm	0-6
Micro PDF417	0x72	R	]Lm	3,4,5
PDF417	0x72	r	]Lm	0-2
QR (Micro QR)	0x73	s	]Qm	0-6

## Appendix3 Control Escape Character

Decimal	ASCII	Control + ASCII Mode	Alt + Keypad Mode
1	SOH (Start of Header)	Ctrl+A	Alt+001
2	STX (Start of Text)	Ctrl+B	Alt+002
3	ETX (End of Text)	Ctrl+C	Alt+003
4	EOT (End of Transmission)	Ctrl+D	Alt+004
5	ENQ (Enquiry)	Ctrl+E	Alt+005
6	ACK (Acknowledgment)	Ctrl+F	Alt+006
7	BEL (Bell)	Ctrl+G	Alt+007
8	BS (Backspace)	Back Space	Alt+008
9	HT (Horizontal Tab)	Tab	Alt+009
10	LF (Line Feed)	Ctrl+P	Alt+010
11	VT (Vertical Tab)	Ctrl+Q	Alt+011
12	FF (Form Feed)	Ctrl+R	Alt+012
13	CR (Carriage Return)	Enter	Alt+013
14	SO (Shift Out)	Ctrl+N	Alt+014
15	SI (Shift In)	Ctrl+O	Alt+015
16	DLE (Data Link Escape)	Ctrl+P	Alt+016
17	DC1 (XON) (Device Control 1)	Ctrl+Q	Alt+017
18	DC2 (Device Control 2)	Ctrl+R	Alt+018
19	DC3 (XOFF) (Device Control 3)	Ctrl+S	Alt+019
20	DC4 (Device Control 4)	Ctrl+T	Alt+020
21	NAK (Negative Acknowledgement)	Ctrl+U	Alt+021
22	SYN (Synchronous Idle)	Ctrl+V	Alt+022
23	ETB (End of Trans. Block)	Ctrl+W	Alt+023
24	CAN (Cancel)	Ctrl+X	Alt+024
25	EM (End of Medium)	Ctrl+Y	Alt+025
26	SUB (Substitute)	Ctrl+Z	Alt+026
27	ESC (Escape)	Ctrl+[	Alt+027
28	FS (File Separator)	Ctrl+\	Alt+028
29	GS (Group Separator)	Ctrl+]	Alt+029
30	RS (Request to Send)	Ctrl+ ^	Alt+030
31	US (Unit Separator)	Ctrl+_	Alt+031

## Appendix 4 ASCII Table

(The characters in yellow background is control characters. The characters in white background is visible characters.)

Binary	Decimal	Hexadecimal	Char
0	0	0	NUL (NULL)
1	1	1	SOH (Start Of Headling)
10	2	2	STX (Start Of Text)
11	3	3	ETX (End Of Text)
100	4	4	EOT (End Of Transmission)
101	5	5	ENQ (Enquiry)
110	6	6	ACK (Acknowledge)
111	7	7	BEL (Bell)
1000	8	8	BS (Backspace)
1001	9	9	HT (Horizontal Tab)
1010	10	0A	LF/NL(Line Feed/New Line)
1011	11	0B	VT (Vertical Tab)
1100	12	0C	FF/NP (Form Feed/New Page)
1101	13	0D	CR (Carriage Return)
1110	14	0E	SO (Shift Out)
1111	15	0F	SI (Shift In)
10000	16	10	DLE (Data Link Escape)
10001	17	11	DC1/XON
			(Device Control 1/Transmission On)
10010	18	12	DC2 (Device Control 2)
10011	19	13	DC3/XOFF
			(Device Control 3/Transmission Off)
10100	20	14	DC4 (Device Control 4)
10101	21	15	NAK (Negative Acknowledge)
10110	22	16	SYN (Synchronous Idle)
10111	23	17	ETB (End of Transmission Block)

11000	24	18	CAN (Cancel)
11001	25	19	EM (End of Medium)
11010	26	1A	SUB (Substitute)
11011	27	1B	ESC (Escape)
11100	28	1C	FS (File Separator)
11101	29	1D	GS (Group Separator)
11110	30	1E	RS (Record Separator)
11111	31	1F	US (Unit Separator)
100000	32	20	(Space)
100001	33	21	!
100010	34	22	"
100011	35	23	#
100100	36	24	\$
100101	37	25	%
100110	38	26	&
100111	39	27	'
101000	40	28	(
101001	41	29	)
101010	42	2A	*
101011	43	2B	+
101100	44	2C	,
101101	45	2D	-
101110	46	2E	.
101111	47	2F	/
110000	48	30	0
110001	49	31	1
110010	50	32	2
110011	51	33	3
110100	52	34	4
110101	53	35	5
110110	54	36	6
110111	55	37	7
111000	56	38	8
111001	57	39	9
111010	58	3A	:
111011	59	3B	;
111100	60	3C	<
111101	61	3D	=



111110	62	3E	>
111111	63	3F	?
1000000	64	40	@
1000001	65	41	A
1000010	66	42	B
1000011	67	43	C
1000100	68	44	D
1000101	69	45	E
1000110	70	46	F
1000111	71	47	G
1001000	72	48	H
1001001	73	49	I
1001010	74	4A	J
1001011	75	4B	K
1001100	76	4C	L
1001101	77	4D	M
1001110	78	4E	N
1001111	79	4F	O
1010000	80	50	P
1010001	81	51	Q
1010010	82	52	R
1010011	83	53	S
1010100	84	54	T
1010101	85	55	U
1010110	86	56	V
1010111	87	57	W
1011000	88	58	X
1011001	89	59	Y
1011010	90	5A	Z
1011011	91	5B	[
1011100	92	5C	\
1011101	93	5D	]
1011110	94	5E	^
1011111	95	5F	_
1100000	96	60	`
1100001	97	61	a
1100010	98	62	b
1100011	99	63	c

1100100	100	64	d
1100101	101	65	e
1100110	102	66	f
1100111	103	67	g
1101000	104	68	h
1101001	105	69	i
1101010	106	6A	j
1101011	107	6B	k
1101100	108	6C	l
1101101	109	6D	m
1101110	110	6E	n
1101111	111	6F	o
1110000	112	70	p
1110001	113	71	q
1110010	114	72	r
1110011	115	73	s
1110100	116	74	t
1110101	117	75	u
1110110	118	76	v
1110111	119	77	w
1111000	120	78	x
1111001	121	79	y
1111010	122	7A	z
1111011	123	7B	{
1111100	124	7C	
1111101	125	7D	}
1111110	126	7E	~
1111111	127	7F	DEL (Delete)

## Appendix 5 Code ID Table

Barcode Type	Setting Barcodes
EAN-13 (ISBN)	
Codablock F	
EAN-8	
UPC-A	
UPC-E	
Code 128 (ISBT 128)	
GS1-128	
Code 39	
Code 32	
Trioptic Code 39	
Code 93	

Codabar	
Interleaved 2 of 5	
Industrial 2 of 5 (Straight 2 of 5 IATA)	
Matrix 2 of 5	
Code 11	
MSI-Plessey	
RSS14 (GS1 DataBar Stacked)	
RSS-Limited	
RSS-Expanded	
QR(Micro QR)	
Data Matrix	
PDF417	

Micro PDF417	
Aztec Code	
HANXIN	
Maxicode	
Dot Code	
Grid Matrix	
Hong Kong 2 of 5 (China Post)	
NEC 2 of 5	
Telepen	

## Appendix 6 Prefix/Suffix Control Character Table

Note: Prefix and suffix control characters are not affected by "Control + ASCII mode" and "Alt + Keypad mode".

Decimal	ASCII	Control Character
1	SOH (Start of Header)	Null
2	STX (Start of Text)	Home
3	ETX (End of Text)	End
4	EOT (End of Transmission)	Null
5	ENQ (Enquiry)	Null
6	ACK (Acknowledgment)	Null
7	BEL (Bell)	Null
8	BS (Backspace)	Null
9	HT (Horizontal Tab)	Tab
10	LF (Line Feed)	Down Arrow
11	VT (Vertical Tab)	Null
12	FF (Form Feed)	Null
13	CR (Carriage Return)	Enter
14	SO (Shift Out)	Null
15	SI (Shift In)	Null
16	DLE (Data Link Escape)	Null
17	DC1 (XON) (Device Control 1)	Null
18	DC2 (Device Control 2)	Null
19	DC3 (XOFF) (Device Control 3)	Null
20	DC4 (Device Control 4)	Null
21	NAK (Negative Acknowledgement)	Null
22	SYN (Synchronous Idle)	Null
23	ETB (End of Trans. Block)	Null
24	CAN (Cancel)	Null
25	EM (End of Medium)	Null
26	SUB (Substitute)	Null
27	ESC (Escape)	Null
28	FS (File Separator)	Null
29	GS (Group Separator)	Null
30	RS (Request to Send)	Null
31	US (Unit Separator)	Null

Symbologies	Code ID		AIM ID
	HEX	Cha	ID
All Symbologies	0x99		
Codabar	0x61	a	]F0
Code 11	0x68	h	]H1
Code 128(Including GS1 128)、 GS1-128	0x6A	j	]C0
ISBT 128	0x6A	j	]C0
Code 32	0x3C	<	]X0
Code 39	0x62	b	]A0
Code 93	0x69	i	]G0
EAN			
EAN-13(including ISBN)	0x64	d	]E0
EAN-8	0x44	D	]E4
GS1			
GS1 DataBar	0x79	y	]e0
GS1 DataBar Limited	0x7B	{	]e0
GS1 DataBar Expanded	0x7D	}	]e0
2 of 5			
Interleaved 2 of 5	0x65	e	]I0
Matrix 2 of 5	0x6D	m	]X0
Straight 2 of 5 Industrial	0x66	f	]S0
MSI	0x67	g	]M1

UPC			
UPC-A	0x63	c	]E0
UPC-E	0x45	E	]E0
Aztec Code	0x7A	z	]z0
Han Xin	0x48	H	]X0
Codablock F	0x6A	j	]C0
Data Matrix	0x77	w	]d1
PDF417、 Micro PDF417	0x72	r	]L0
QR、 Micro QR	0x73	s	]Q1





**Thank you for  
your viewing!**